Husqvarna

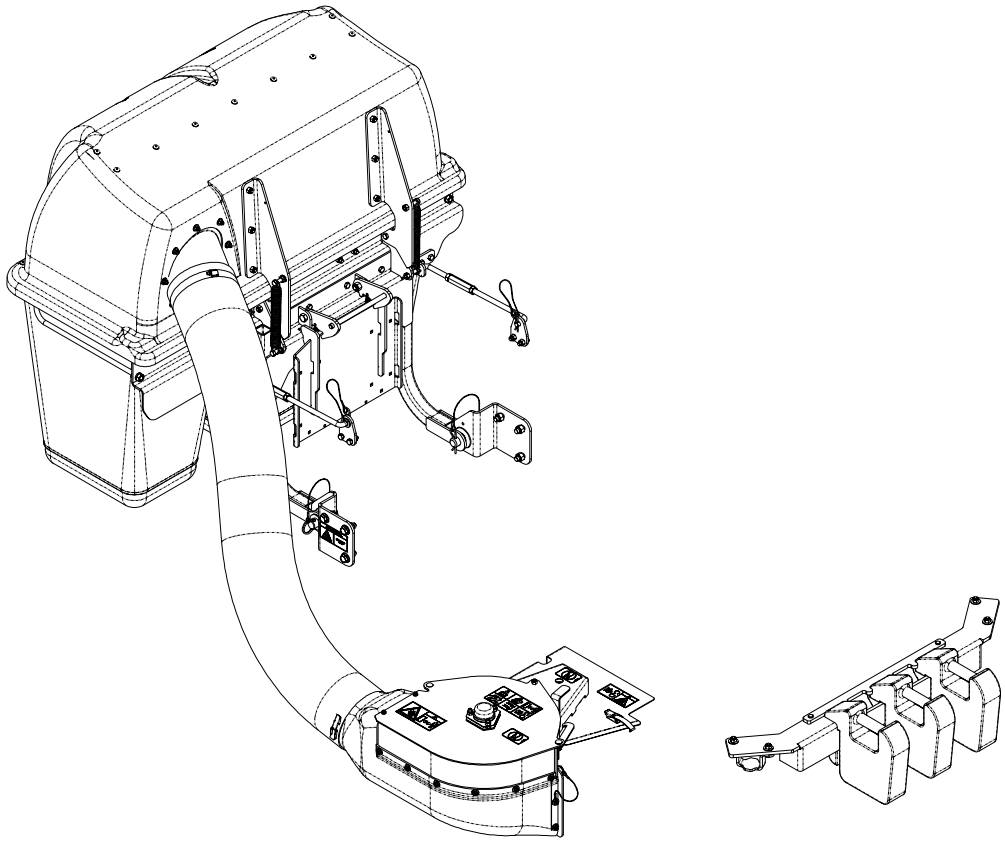

Collection System

Operators Manual
Parts Manual

Models: 111280 / HCS9
111281 / HCS13

Please read these instructions carefully and make sure you understand them before using the machine.

MANUAL NO. 539111288 REV 01 (03/31/05)

©2005 Husqvarna. All Rights Reserved.
Beatrice, NE. Printed in U.S.A.

INDEX

Operators Guide

Features and Controls 4
General Information 5
Safety Procedures 5
Unpacking Instructions 7
Assembly Instructions 7
    Collection System 7
    Blower/Drive Kit 11

Operating the Collection System 14

Maintenance and Service Instructions

Transport 15
Cleaning and Washing 15
Storage 15
Preventative Maintenance Schedule 15
Caring for Vacuum Hoses 16
Cleaning Poly Mesh 16
Caring for Bags 16
Troubleshooting Guide 17

Replacement Parts

Hood Assembly 20
Hitch Assembly 22
Blower Assembly 24
Weight Kit (Model HCS13) 26
Weight Kit (Model HCS9) 27
Mounting Kit (Model HCS13) 28
Mounting Kit (Model HCS9) 30
Bag Assembly 32
Drive Kit (42” Deck) 33
Drive Kit (48” Deck) 34
Drive Kit (52” Deck) 35
Drive Kit (61” Deck) 36

WARNING: Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

FEATURES & CONTROLS

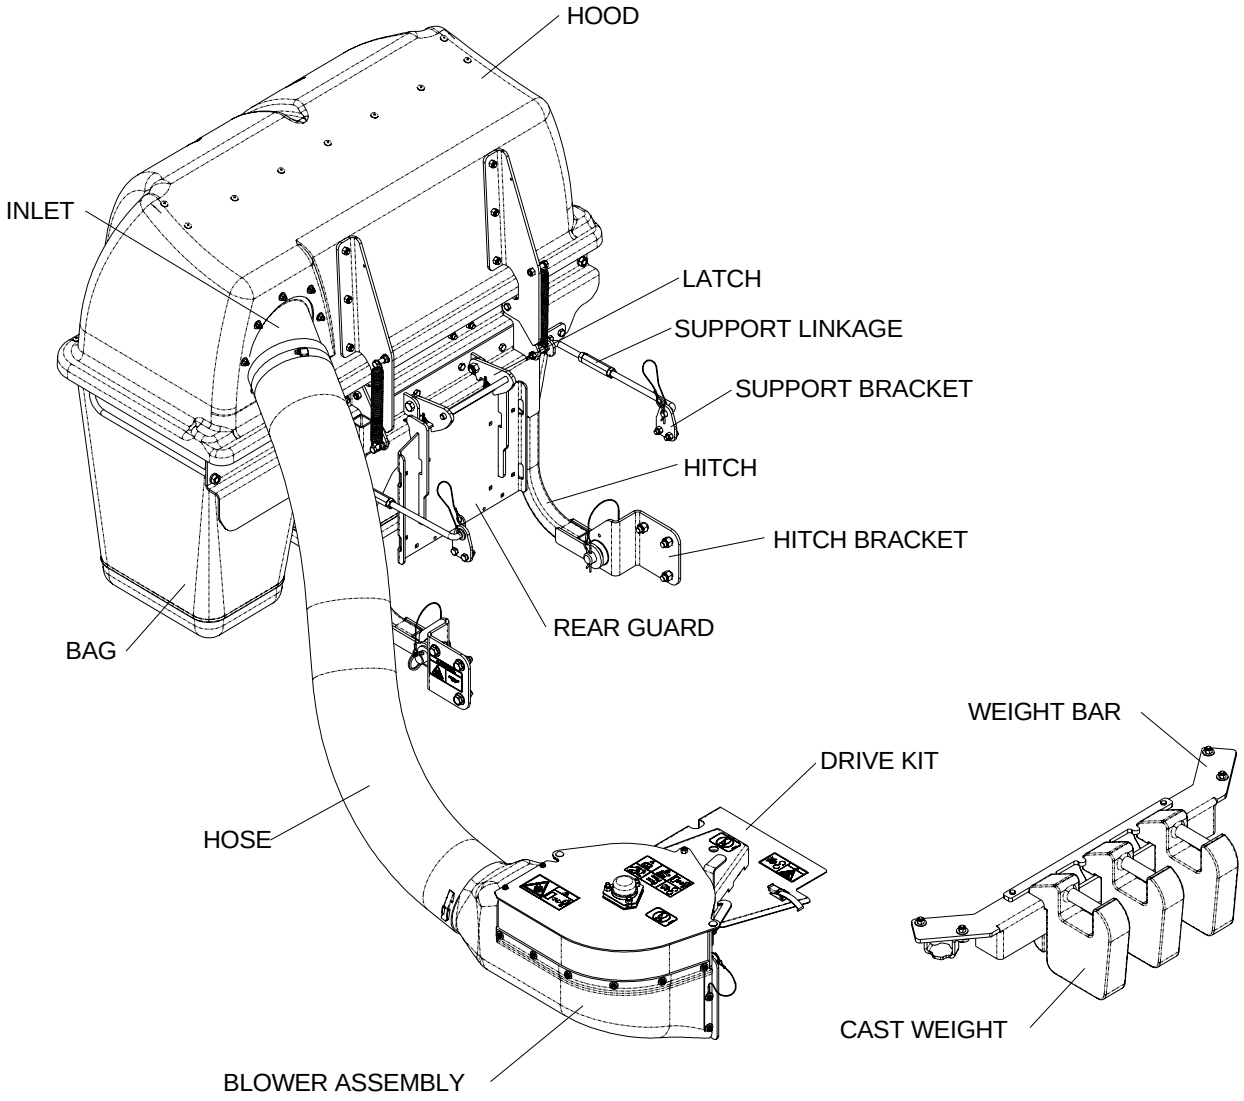

NOTE: Your Front Weight Bar may look different from those shown in this diagram.

SAFETY RULES

General Information

This manual will assist you in the safe operation and proper maintenance of your Husqvarna equipment. Read it thoroughly before attempting to operate the machine. Call your dealer or Husqvarna if additional information is required.

The following safety symbols are used throughout the manual to alert you to information about unsafe actions or situations:

DANGER indicates immediate hazards that may result in severe injury or death.

WARNING indicates unsafe actions or situations that may cause severe injury, death, and/or major equipment or property damage.

CAUTION indicates unsafe actions or situations that may cause injury and/or minor equipment or property damage.

This equipment should not be modified without the manufacturer's prior written authorization. Doing so may not only affect the equipments' performance and durability, but also create safety hazards for the operator and the surroundings. Warranty will be void if changes are made to the equipment without the manufacturer's prior written authorization.

Safety Procedures

1 - Training:

- Read the Operator's manual. If the operator(s) or mechanic(s) can not read English it is the owner's responsibility to explain this material to them.
- Become familiar with the safe operation of the equipment, operator's controls, and safety signs.
- All operators and mechanics should be trained. The owner is responsible for training the users.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people, and/or property.

2 - Preparation:

- Wear appropriate clothing including hard hat, safety glasses and ear protection. Long hair, loose clothing or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used and remove all objects such as rocks, toys and wire which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive. Use only an approved container. Never remove gas cap or add fuel with engine running. Allow engine to cool before refueling. Do not smoke while fueling or operating equipment. Never refuel or drain the machine indoors.
- Check that operator's controls, safety switches, hoses, and shields are securely attached and functioning properly. Do not operate unless they are functioning properly.

SAFETY RULES

3 - Operation

- Never run an engine in an enclosed area.
- Only operate in good light, keeping away from holes and hidden hazards.
- Slow down and use extra care on hillsides. Make turns gradually and at slow speed. Do not operate across the sides of slopes. Operate up and down slopes only. Do not operate on steep slopes.
- Turf conditions can affect the machine's stability. Do not operate on wet grass where traction may be reduced.
- Do not change the engine governor setting or overspeed the engine.
- Stop equipment and inspect vacuum impeller and hoses after striking objects or if an abnormal vibration occurs. Make necessary repairs before resuming operations.
- Look behind and down before backing up to ensure a clear path.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop vacuum and mower blades if not mowing.
- Do not operate machine under the influence of alcohol or drugs.
- Use care when loading or unloading the machine into a trailer or truck.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

4 - Maintenance and Storage:

- Stop engine and disconnect spark plug wire. Wait for all movement to stop before adjusting, cleaning, or repairing.
- Clean grass and debris from muffler and engine to help prevent fires. Clean up oil or fuel spillage.
- Let engine cool before storing and do not store near sparks or open flame.
- Shut off fuel while storing. Do not store fuel near flames or drain indoors.
- Never allow untrained personnel to service machine.
- Keep hands and feet away from moving parts. If possible, do not make adjustments with the engine running.
- Keep all parts in good working condition and all hardware tightened. Replace all worn or damaged decals.

ASSEMBLY

Unpacking Instructions

1. Cut plastic tie securing the hitch to the crate top.
2. Remove the top of the crate.
3. Remove the plastic bag.
4. Remove the hose.
5. Remove the sides and ends of the crate.
6. Remove the mounting kit box from the corner of the crate.
7. Cut the two plastic ties that secure the hitch assembly to the pallet. Remove the hitch assembly.
8. Cut the two plastic ties that secure the back of the hood, and the two that secure the front of the hood. Remove the hood assembly.
9. Cut and two plastic ties that secure the weight bar to the pallet. Remove the weight bar.
10. Cut the two plastic ties that secure the blower assembly to the pallet. Remove the blower assembly.
11. Remove the 1 x 4 that secures the cast weights to the pallet. Remove the weights.

Assembly Instructions

Collection System

Tools Required:

Ratchet	(2) 3/4" Wrench
Torque Wrench	3/4" Socket
1/2" Wrench	Flat Screw Driver
1/2" Socket	5/32" Allen Wrench
9/16" Wrench	Hacksaw
9/16" Socket	11/32" Drill Bit
5/8" Socket	Drill

1. Open the mounting kit box and remove all of the components.
2. Place the support bracket on the frame and secure with (2) 990563, 3/8 x 1 bolts and (2) 976979, 3/8 nyloc nuts. Figure 1.
3. Place the hitch brackets on the frame and secure with (3) 990622, 1/2 x 1 1/4 bolts and (3) 101331, 1/2 nyloc nuts. Figure 1.

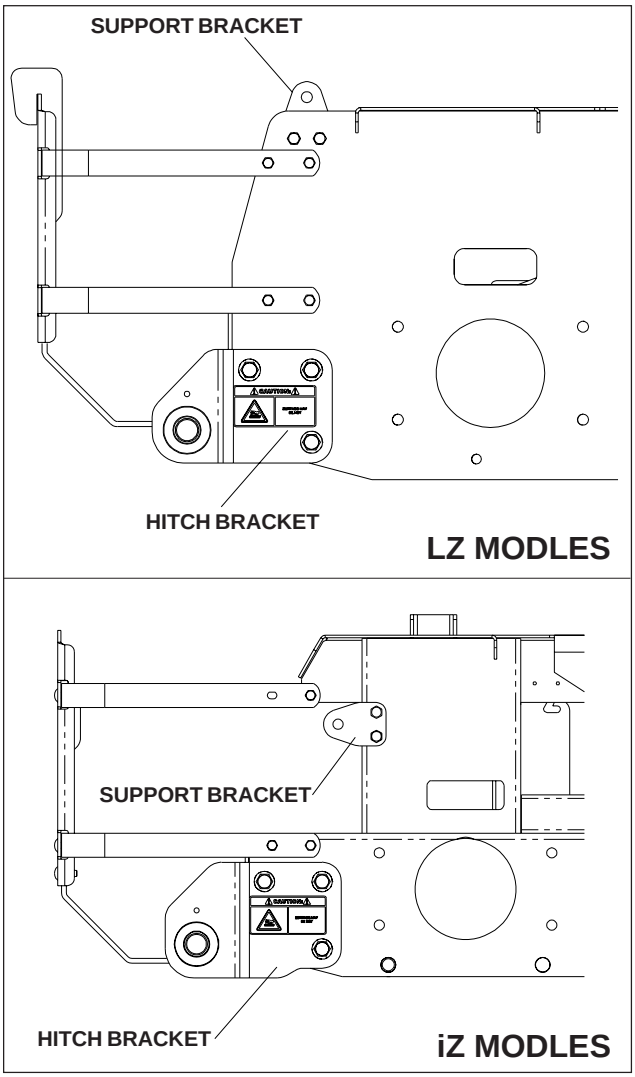

FIGURE 1

ASSEMBLY

4. Remove the (10) 5/16 carriage bolts that secure the standard rear guard to the straps and skid plates. Remove the standard rear guard. Replace with the collection rear guard, and secure with the carriage bolts that were just removed. Figure 2.

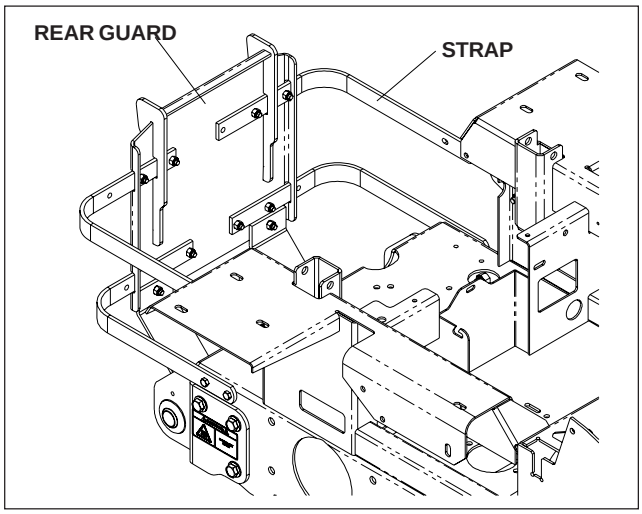

FIGURE 2

5. Place the hitch assembly on the ground behind the mower. Place the (2) hitch pins thru the hitch and the hitch brackets. Secure the hitch pins with the (2) hairpins that are secured with the (2) lanyards. Figure 3.

6. Move to the rear of the hitch assembly and pick it up towards the rear guard. The latch will hook over the top of the rear guard. Figure 3.

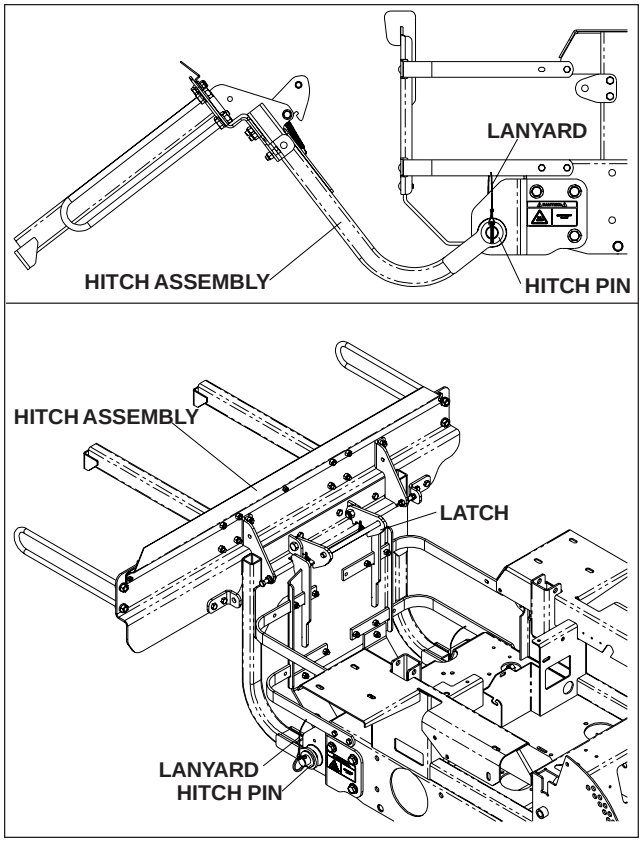

FIGURE 3

ASSEMBLY

7. Place the hood assembly on to the hitch assembly. Place both hood hinges between the upper hitch mounts on the hitch assembly. Be sure that the rubber seal is on the inside of the hood. Place the (2) friction washers between the hood hinge and the upper hitch mount. Place (2)990563, 3/8 x 1 bolt thru the hinge and mount. Secure with (2) 976979, 3/8 nyloc nut. Figure 4.

8. Open the hood and secure the (2) springs to the bolts on the hood assembly and the hitch assembly. Figure 4.

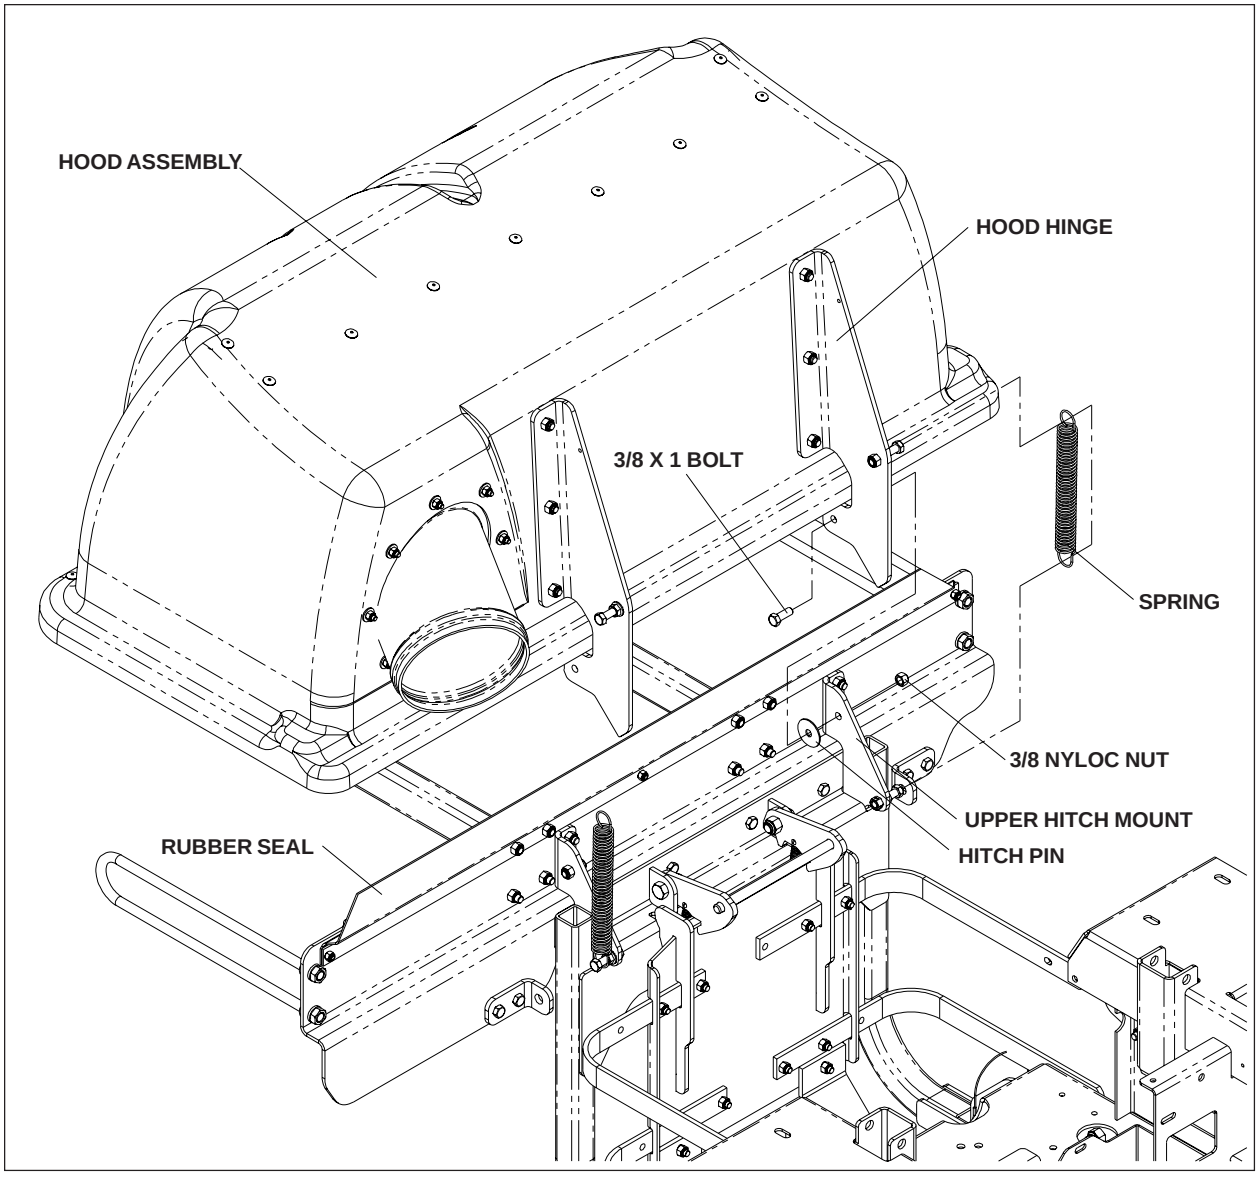

FIGURE 4

ASSEMBLY

9. With the hood open, secure the (3) bags in place. The back of the bags will hook over the mounting tabs on the hitch assembly. Figure 5.
10. Close the hood, and latch the draw latch over the draw latch keeper on the hitch assembly. Figure 5.

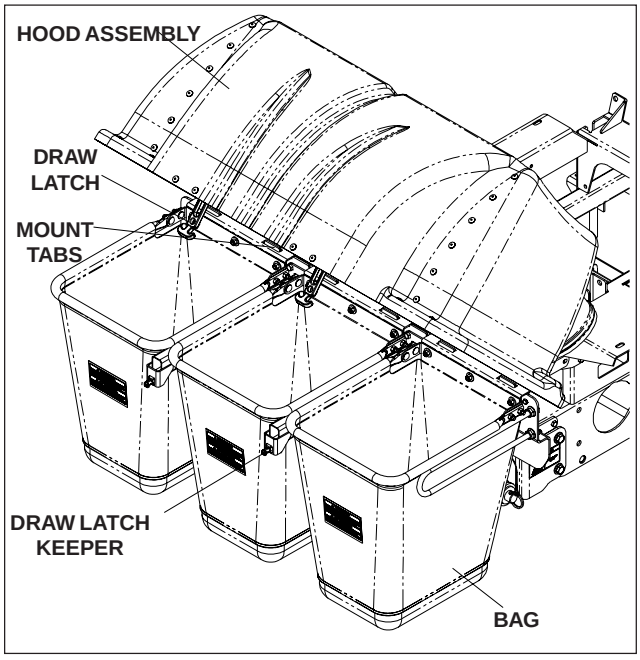

FIGURE 5

11. Install the (2) linkage assemblies to the (2) support brackets on hitch assembly and the (2) support brackets on the frame. The shorter linkage connects to the support bracket on the hitch assembly. Figure 6.

NOTE: The linkage assemblies may need to be adjusted. Using (2) 3/4" wrenches, loosen the 1/2" jam nut on the longer linkage. Turn the turnbuckle in the appropriate direction to shorten the linkage assembly. Turn until the slop is taken out of the linkages. Tighten the jam nut against the turnbuckle.

12. Secure the front of the linkage assemblies using the hairpin secured by the lanyard. Secure the rear of the linkages using the (2) 990654, cotter pins provided. Figure 6.
13. Place the hose on the inlet and secure with the hose clamp.

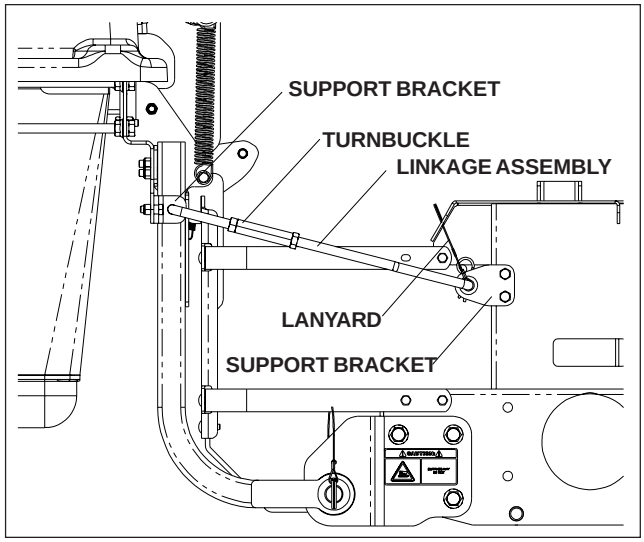

FIGURE 6

Blower/Drive Kit

1. Open the drive kit box and remove all of the components.

2. Place the deck in the lowest cutting height.

3. Remove the right side belt shield from the deck.

4. Remove the deck belt from the right side pulley.

5. Remove the deck pulley.

Note: When the deck pulley is removed, the spindle can fall out of the cutter housing assembly. Be sure to secure the bottom of the spindle so that this does not happen.

6. Place the double pulley on the cutter housing assembly.

7. Place the heavy washer, and 7/16 lock washer on the 108951, 7/16 x 2 1/2 bolt and install in the spindle. Torque to 45 ft/lbs.

8. Place the blower assembly on it's top.

9. Using the 5/32" allen wrench, remove the 111229, 1/4 x 5/8 screw on the pulley shield. Figure 1.

10. Loosen the nut on the belt guide, and install the belt on the pulley. Figure 2.

11. Place the belt guide approximately 1/8" away from the pulley and re-tighten the nut. Figure 1.

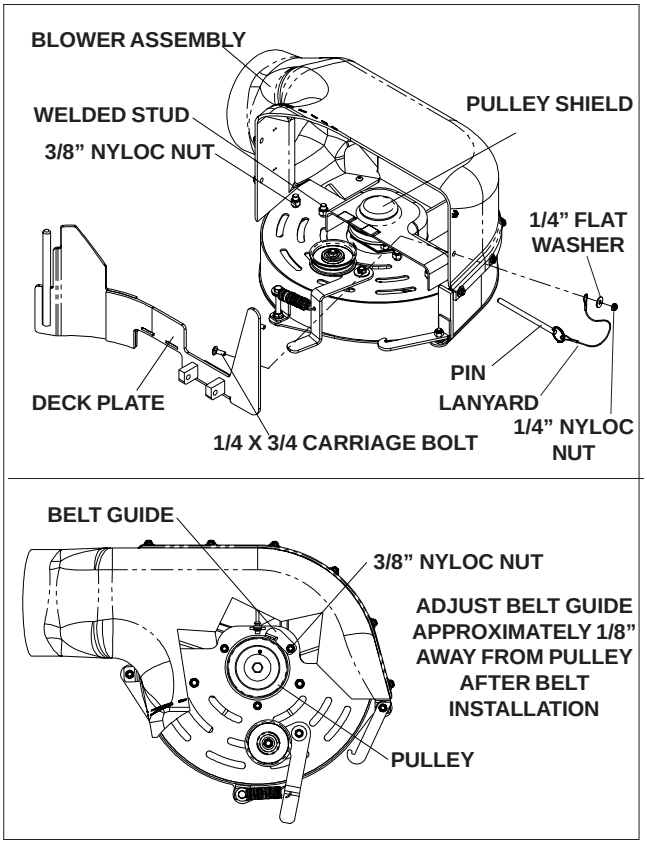

FIGURE 1

ASSEMBLY

12. Re-install the pulley shield.

13. Cut the blower housing along the dashed line to fit the 52" and 61" decks. Drill the two small holes indicated with the 11/32" drill bit. The blower housing will fit 42" and 48" units with no modifications. Figure 2.

14. Remove the (4) 1/4 x 3/4 carriage bolts from the deck plate, and the (4) 3/8" nyloc nuts from the inside of the blower housing. Figure 1.

15. Place the deck plate on the welded studs in the blower housing. Install and tighten the (4) 3/8" nyloc nuts that were just removed. Figure 1.

16. Install the (4) 990074, 1/4 x 3/4 carriage bolts thru the square holes in the deck plate from the inside out.

17. Place the (4) 990598, 1/4 flat washers and (4) 108120, 1/4" nyloc nuts on the carriage bolts. The lanyard must be placed on the top front carriage bolt between the flat washer and the blower housing. Tighten the nuts. Figure 1.

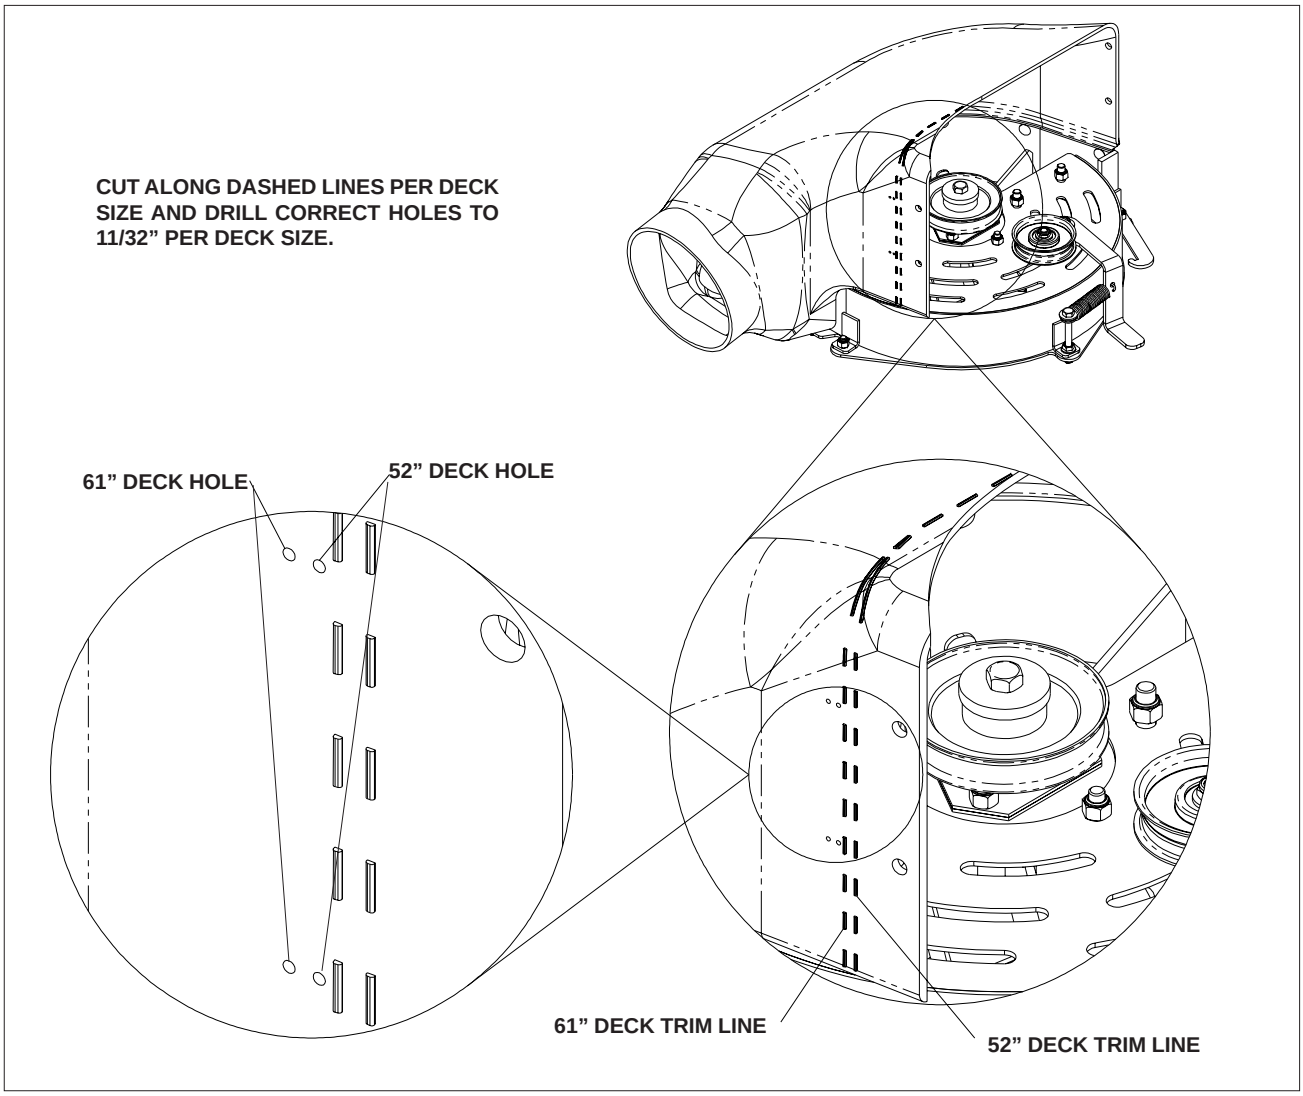
CUT ALONG DASHED LINES PER DECK SIZE AND DRILL CORRECT HOLES TO 11/32” PER DECK SIZE.
61” DECK HOLE
52” DECK HOLE
61” DECK TRIM LINE
52” DECK TRIM LINE

FIGURE 2

ASSEMBLY

18. Remove the discharge chute from the deck.

19. Place the deck plate pin in the tube on the back edge of the deck. Rotate the blower around and into place. Figure 3.

20. Install the pin thru the tabs on both the deck and the blower. Figure 3.

21. Latch the idler arm in the idler keeper. Figure 3.

22. Install the belt on the deck pulley and release the idler arm from the keeper.

23. Install the new belt shield.

24. Place the hose on the blower housing and secure with the over center hose clamp.

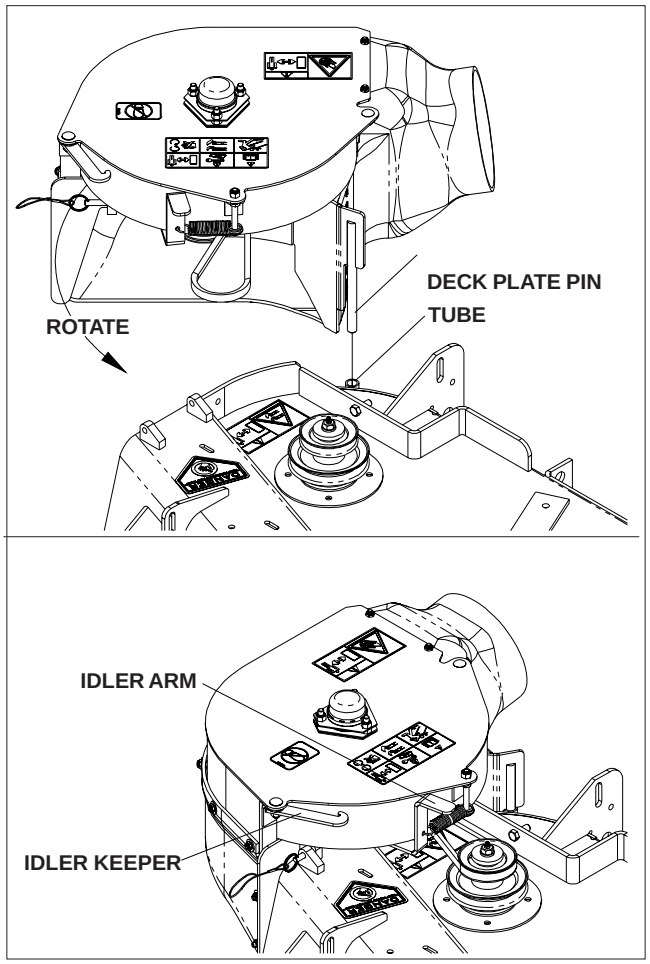

FIGURE 3

Operating the Collection System

1. **NEVER USE THE COLLECTION SYSTEM WITHOUT THE BLOWER ASSEMBLY AND HOSES SECURELY ATTACHED.**

2. Make sure hoses are connected at both ends. Inspect hoses prior to each use.

3. Do not use the unit on slopes greater than 10 degrees.

4. The mower must be running in order to vacuum debris through the mower deck.

5. In heavy grass it may be necessary to mow and collect at a slower ground speed.

6. Never attempt to unclog the collection system until the mower's engine engine has been shut off and all moving parts have come to a complete stop.

7. Do not stand behind the vent at the rear of the collection system due to the potential for small pieces of blowing debris to escape through the vent.

8. Wear eye and ear protection.

SERVICE AND MAINTENANCE

Transport

WARNING

The collection system bags must be completely empty or removed while driving forward onto a trailer. If the mower must be loaded onto a trailer while there is still debris in the container, the mower must be backed up onto the trailer to avoid tipping.

For best results, clean poly mesh inside hood regularly. Instructions for doing this can be found in the Service section of this manual.

Cleaning and Washing

Regular cleaning, washing, and lubricating will prolong the service of the machine.

NOTE: Use care with power washers to avoid damage to decals. Limit direct spray on these items.
DO NOT EXCEED 1000 PSI WATER PRESSURE FOR CLEANING.

Storage

1. Clean machine.
2. Cover all scratches with touch-up paint.
3. Covered or indoor storage is recommended.

Preventative Maintenance Schedule

Item	Before Each Use	Every 5 Hours	Every 25 Hours	Every 50 Hours
Inspect/Clean Poly Mesh	X	X		
Check/Tighten Nuts & Bolts	X			
Check/Tighten Hoses	X			
Turn Hose End to End			X	
Rotate Hose				X
Clean Machine				X
Inspect Bags	X			

SERVICE AND MAINTENANCE

Caring For Hoses

1. Inspect hoses before each use. If hoses have excessive wear, tears, or punctures, replace immediately.
2. To prolong the life of the hose, periodically rotate hose and turn hose end to end. Refer to Preventative Maintenance Schedule in this manual.
3. Avoid twists and sharp turns in the hoses, as they will increase wear on the hoses.
4. Avoid dragging the lower hose along the sides of buildings or other hard surfaces.

Cleaning Poly Mesh

The poly mesh on the collection system is located inside the container hood. For best results, clean poly mesh regularly.

Cleaning Instructions

1. Shut off engine.
2. Release the two (2) rubber latches under the rear of the hood. Open hood and brush debris off of both sides.
3. Close hood and re-latch.

DO NOT USE THE COLLECTION SYSTEM WITHOUT POLY MESH SECURELY IN PLACE.

Caring For Bags

Inspect the bags before each use. If bags have excessive wear, tears or punctures, replace immediately.
Cleaning Instructions

NOTE: Under normal usage the bag material is subject to deterioration and wear.

SERVICE AND MAINTENANCE

Troubleshooting Guide

DANGER

Before servicing unit, wait for all moving parts to come to a complete stop. Turn engine off and remove the spark plug wire.

PROBLEM	POSSIBLE CAUSE	CORRECTION
Loss of Vacuum.	1. Blower, hose or hood inlet clogged. 2. Bags full. 3. Fan blades bent or broken. 4. Poly mesh plugged.	1. Remove hose and clean inlet. 2. Inspect and empty. 3. Replace/repair impeller. 4. Clean poly mesh.
Unusual vibration or noise.	1. Solid object jammed in unit. 2. Loose or missing bolts on unit. 3. Bent or damaged fan.	1. Check and remove any obstruction. 2. Tighten or replace bolts. 3. Replace/repair impleller.
Unit difficult to close.	1. Obstructions keeping door from completely closing. 2. Hood hinge bolts too tight.	1. Clear obstructions. 2. Loosen bolts.

SPINDLE DRIVE ASSEMBLY

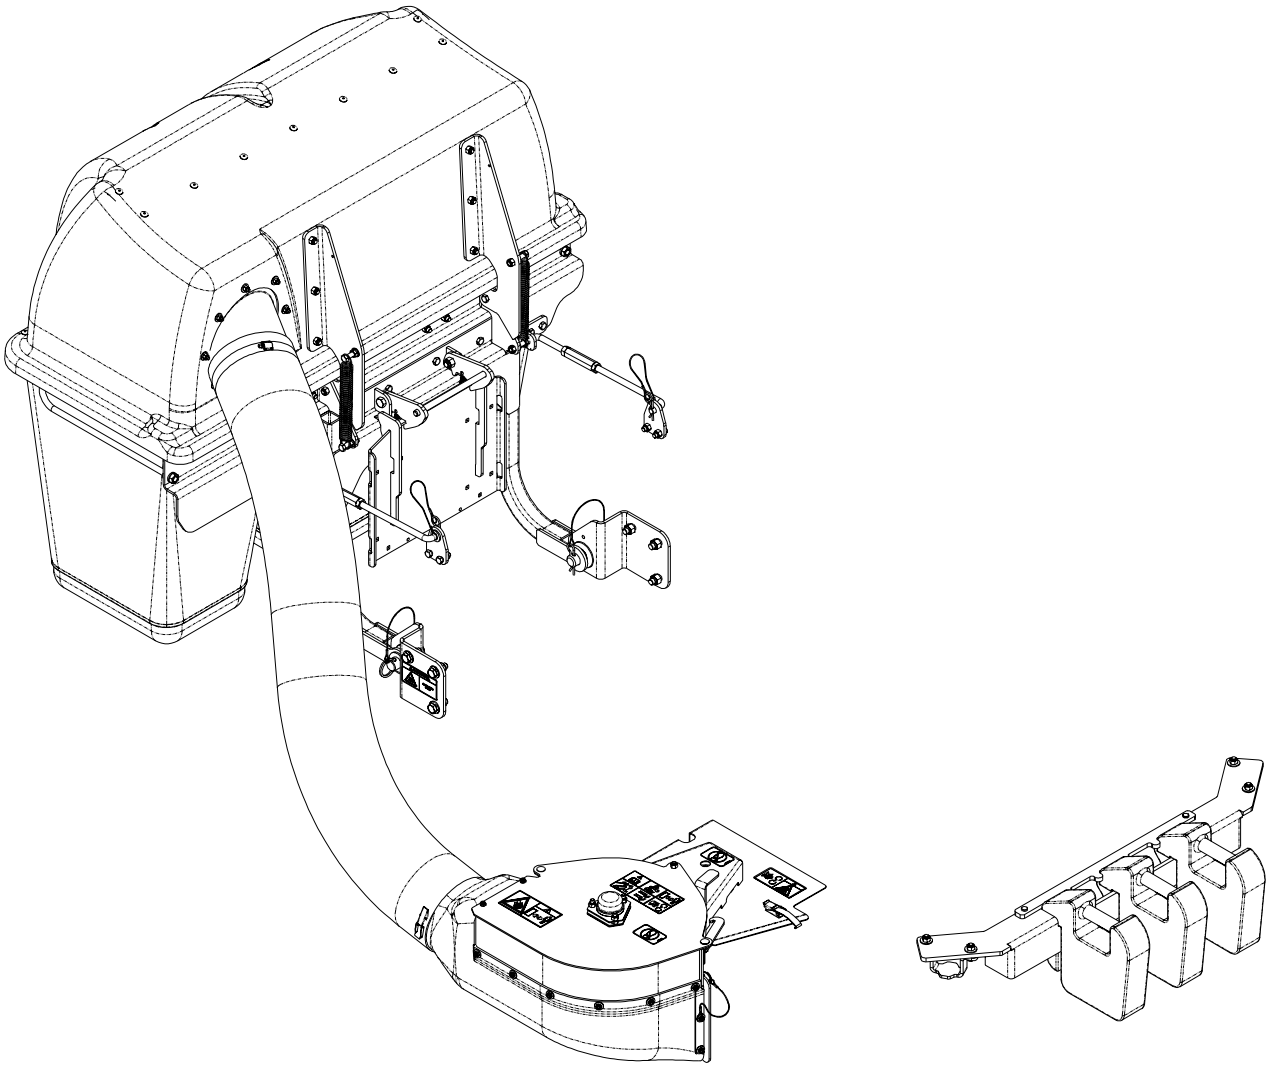

NOTE: Your Front Weight Bar may look different from those shown in this diagram.

PARTS ILLUSTRATIONS

HOOD ASSEMBLY

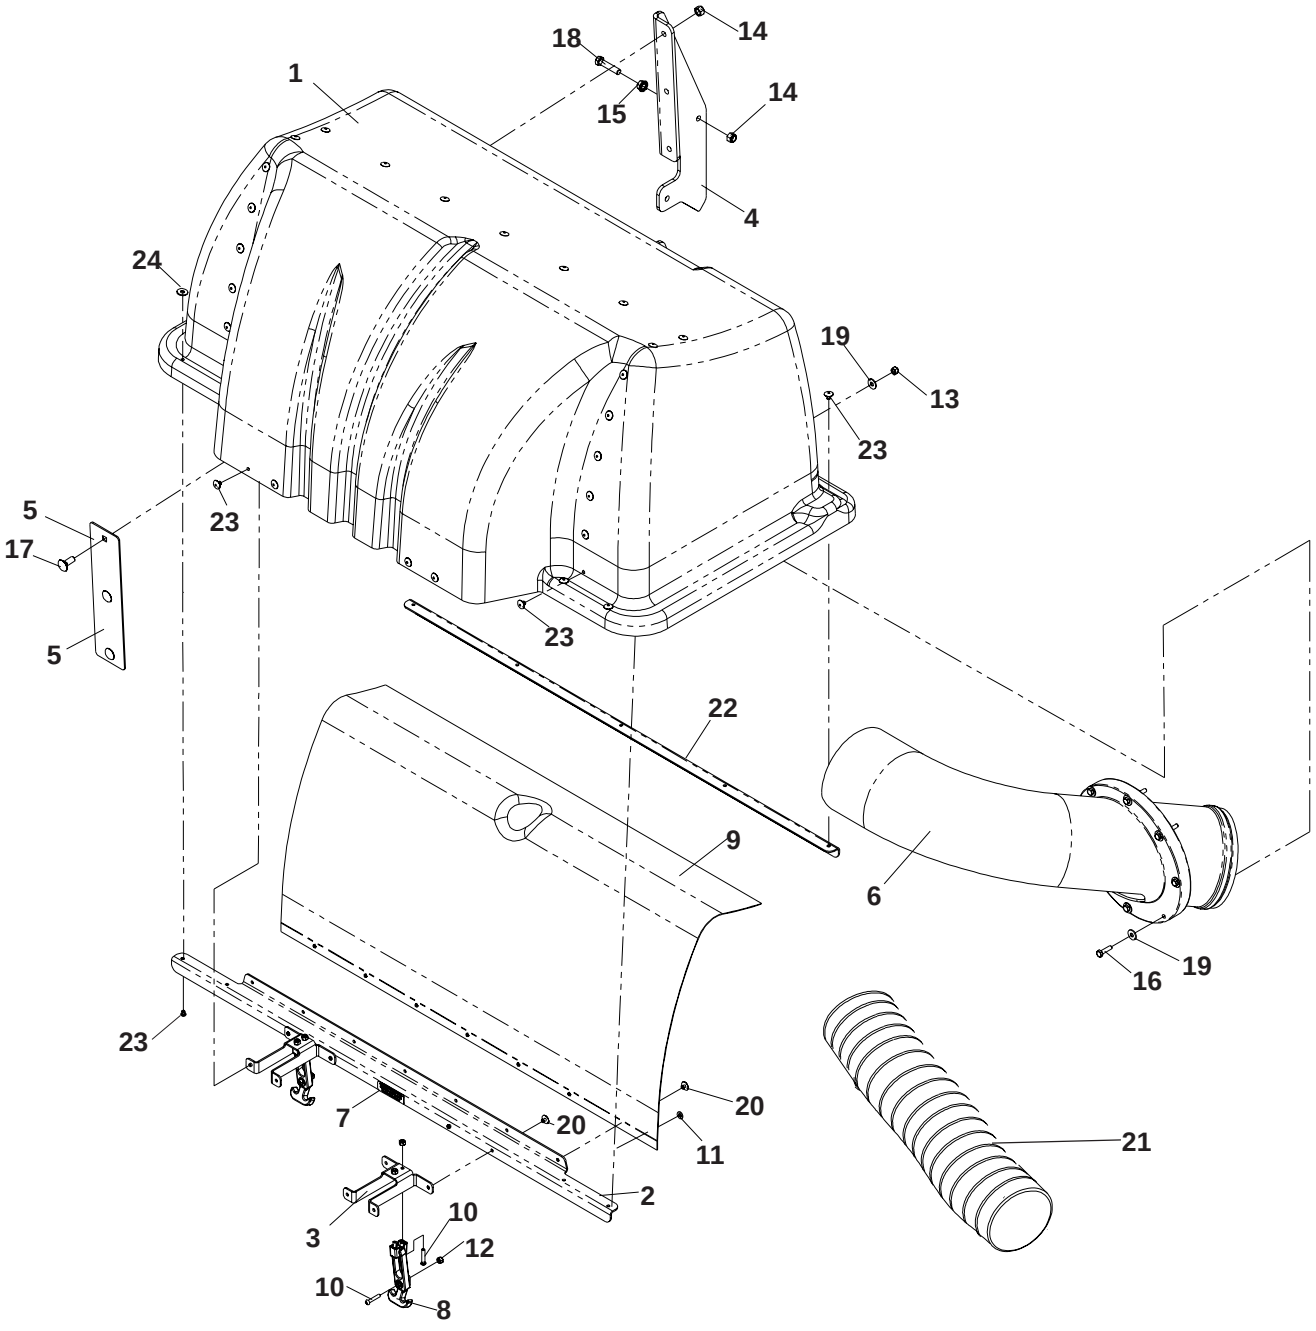

HOOD ASSEMBLY

ITEM	PART NO.	QTY	DESCRIPTION
1	539111172	1	HOOD
2	539111174	1	HOOD SUPPORT
3	539111175	2	SUPPORT, DRAW LATCH
4	539111177	2	HOOD HINGE
5	539111181	2	MOUNT PLATE
6	539111182	1	INLET TUBE
7	539111260	1	DECAL, VENTILATION
8	539200478	2	DRAW LATCH, FLEXIBLE T-HANDLE
9	539111183	1	MESH, POLY DIAMOND
10	539111186	6	SCREW, #10-24 X 1 1/8, MACH.
11	539105408	21	WASHER, #10
12	539976977	6	NUT, #10-24, NYLOC
13	539976978	8	NUT, 1/4C, NYLOC
14	539976979	8	NUT, 3/8C, NYLOC
15	539990613	2	NUT, 3/8C
16	539991003	8	HCS, 1/4-20 X 1 3/4
17	539990645	6	RHSNB, 3/8-16 X 1
18	539990730	2	HCS, 3/8-16 X 1 3/4
19	539990598	16	WASHER, 1/4
20	539102744	11	RIVET, 3/16 X 1/4
21	539111287	1	HOSE, 58”, MODEL HCS13
	539111314	1	HOSE, 54”, MODEL HCS9
22	539111339	1	HOOD SUPPORT, REAR
23	539200684	30	RIVET, 1/4 STAVEX
24	539110033	8	WASHER, #10

HITCH ASSEMBLY

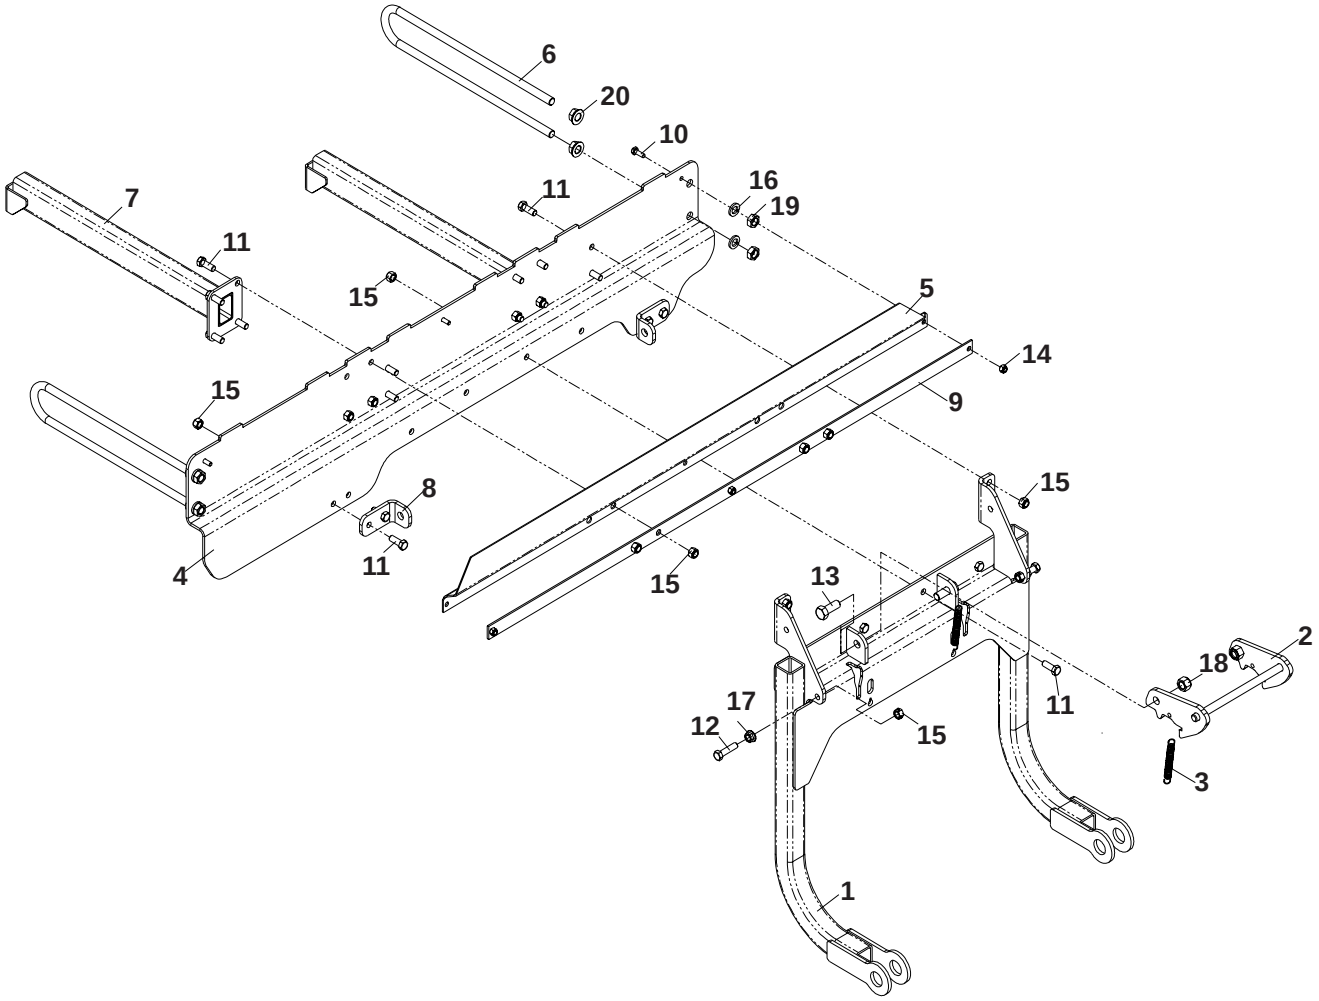

HITCH ASSEMBLY

ITEM	PART NO.	QTY	DESCRIPTION
1	539111155	1	HITCH
2	539111190	1	LATCH
3	539977250	2	SPRING
4	539111157	1	MOUNT Z BRACE
5	539111167	1	SEAL, RUBBER
6	539111158	2	SUPPORT, OUTER
7	539111162	2	SUPPORT ARM
8	539111267	2	BRACKET, SUPPORT
9	539111171	1	SEAL STRAP
10	539990580	3	HCS, 1/4-20 X 3/4
11	539990563	20	HCS, 3/8-16 X 1
12	539990655	2	HCS, 3/8-16 X 1 1/2
13	539108369	2	HCS, 1/2-13 X 1 1/4
14	539976978	3	NUT, 1/4C, NYLOC
15	539976979	22	NUT, 3/8C, NYLOC
16	539990254	4	WASHER, 1/2
17	539990613	2	NUT, 3/8C
18	539101331	2	NUT, 1/2C, NYLOC
19	539990625	4	NUT, 1/2, JAM
20	539111187	4	NUT, 1/2-13, WHIZLOCK

BLOWER ASSEMBLY

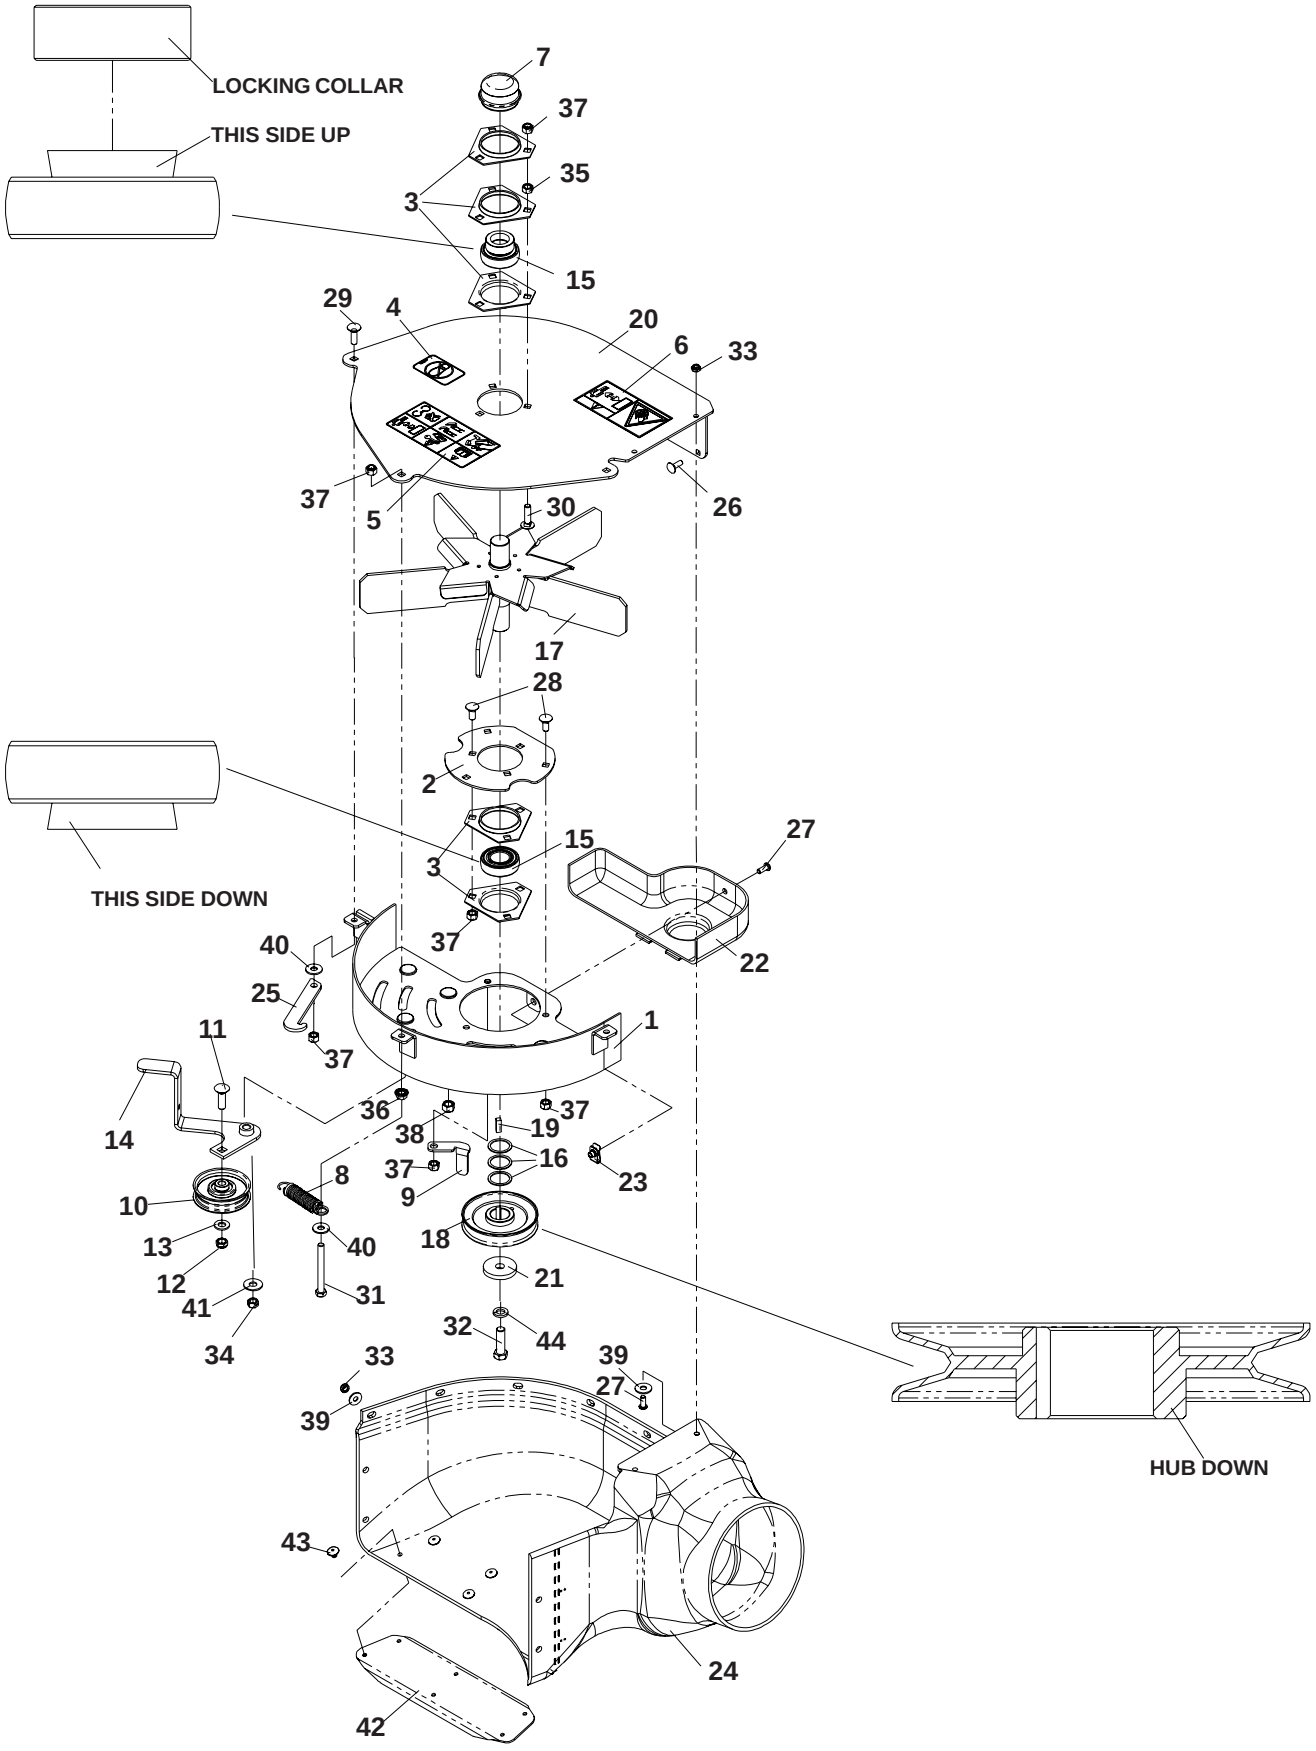

BLOWER ASSEMBLY

ITEM	PART NO.	QTY	DESCRIPTION
1	539111225	1	FLOOR WELDMENT
2	539111227	1	BEARING PLATE
3	539102691	5	FLANGETTE
4	539105743	1	DECAL, NO STEP
5	539105785	1	DECAL, WARNING
6	539106741	1	DECAL, SERVERING
7	539102535	1	GREASE CAP
8	539916159	1	SPRING
9	539111184	1	BELT GUIDE
10	539106721	1	IDLER
11	539100413	1	RHSNB, 3/8-16 X 1 1/4, GR5
12	539200282	1	NUT, 3/8-16, JAM NYLOC
13	539990122	1	WASHER, 3/8, SAE
14	539111218	1	IDLER ARM
15	539106786	2	BEARING
16	539102244	3	BUSHING, MACHINE, 18 GA
17	539111332	1	FAN WELDMENT
18	539106713	1	SHEAVE, 4”
19	539102067	1	KEY, 1/4” SQ. X 3/4”
20	539111331	1	FAN COVER
21	539106504	1	WASHER, HEAVY
22	539111228	1	PULLEY SHIELD
23	539110813	1	RETAINER, 1/4C, “U” TYPE
24	539111220	1	BLOWER HOUSING
25	539111265	1	KEEPER, IDLER
26	539990074	6	RHSNB, 1/4-20 X 3/4, GR2
27	539111229	3	SCREW, 1/4-20 X 5/8, BTN, SKT HD
28	539880316	7	RHSNB, 5/16 X 3/4
29	539990208	1	RHSNB, 5/16-18 X 1, GR5
30	539100472	3	RHSNB, 5/16C X 1 1/4
31	539101721	1	HCS, 5/16-18 X 2 3/4, GR5
32	539100141	1	HCS, 7/16-20 X 1 1/2, GR5
33	539108120	8	NUT, 1/4C, THIN NYLOC
34	53999184	1	NUT, 5/16C, CENTERLOCK
35	539990196	3	NUT, 5/16C
36	539990585	1	NUT, 5/16C
37	539990717	12	NUT, 5/16C, NYLOC
38	539976979	4	NUT, 3/8C, NYLOC
39	539990598	8	WASHER, 1/4
40	539990692	2	WASHER, 5/16
41	539990517	1	WASHER, 3/8
42	539111340	1	BLOWER SUPPORT
43	539102744	6	RIVET
44	539990247	1	LOCKWASHER, 7/16

WEIGHT KIT

MODEL HCS13

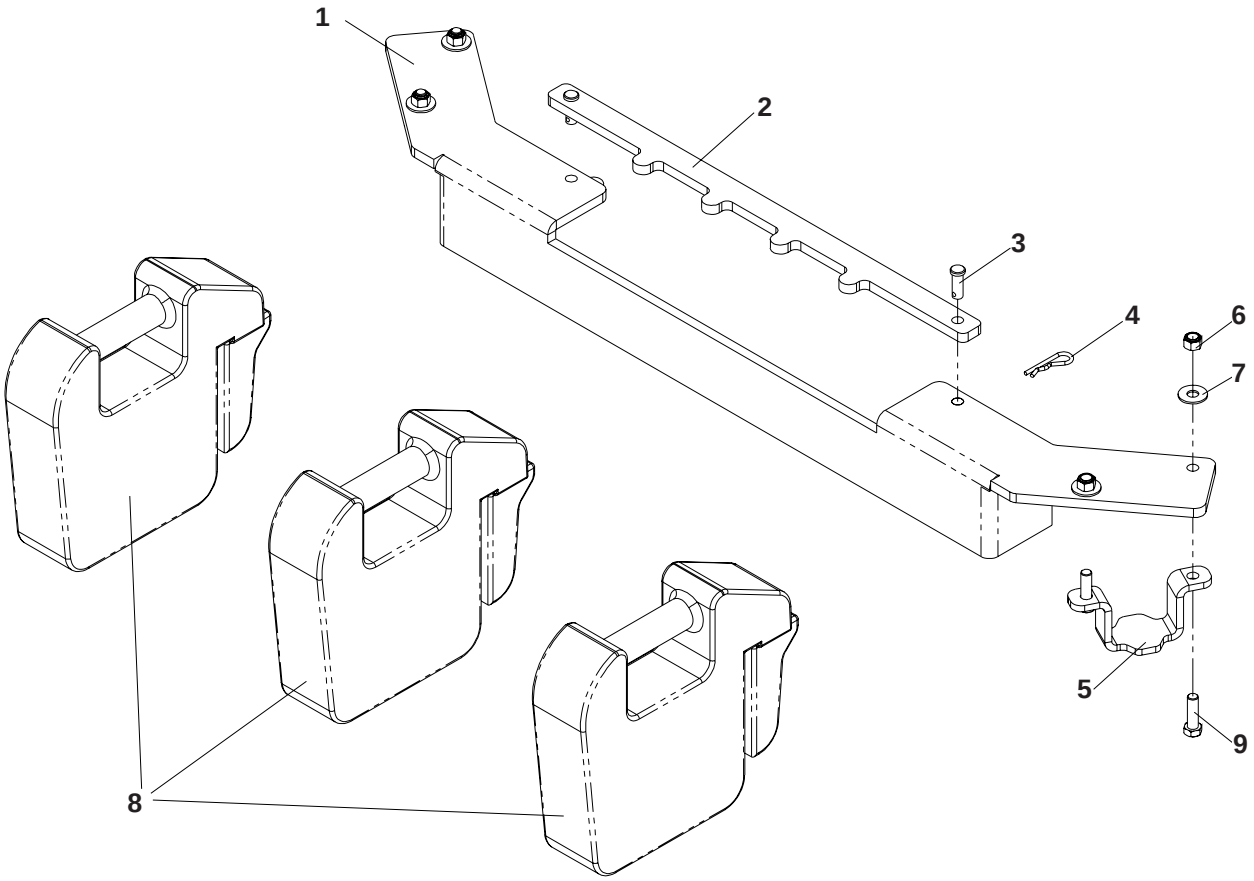

ITEM	PART NO.	QTY	DESCRIPTION
1	539020255	1	WEIGHT BAR, FRONT
2	539111313	1	HOLD DOWN, WEIGHT BAR
3	539102049	2	CLEVIS PIN
4	539108096	2	SPRING RETAINER
5	539111259	2	WEIGHT KEEPER
6	539976979	4	NUT, 3/8, NYLOC
7	539990517	4	WASHER, 3/8
8	ER92531	3	CAST COUNTERWEIGHT
9	539976941	4	HCS, 3/8-16 X 1 1/4, GR5

WEIGHT KIT

MODEL HCS9

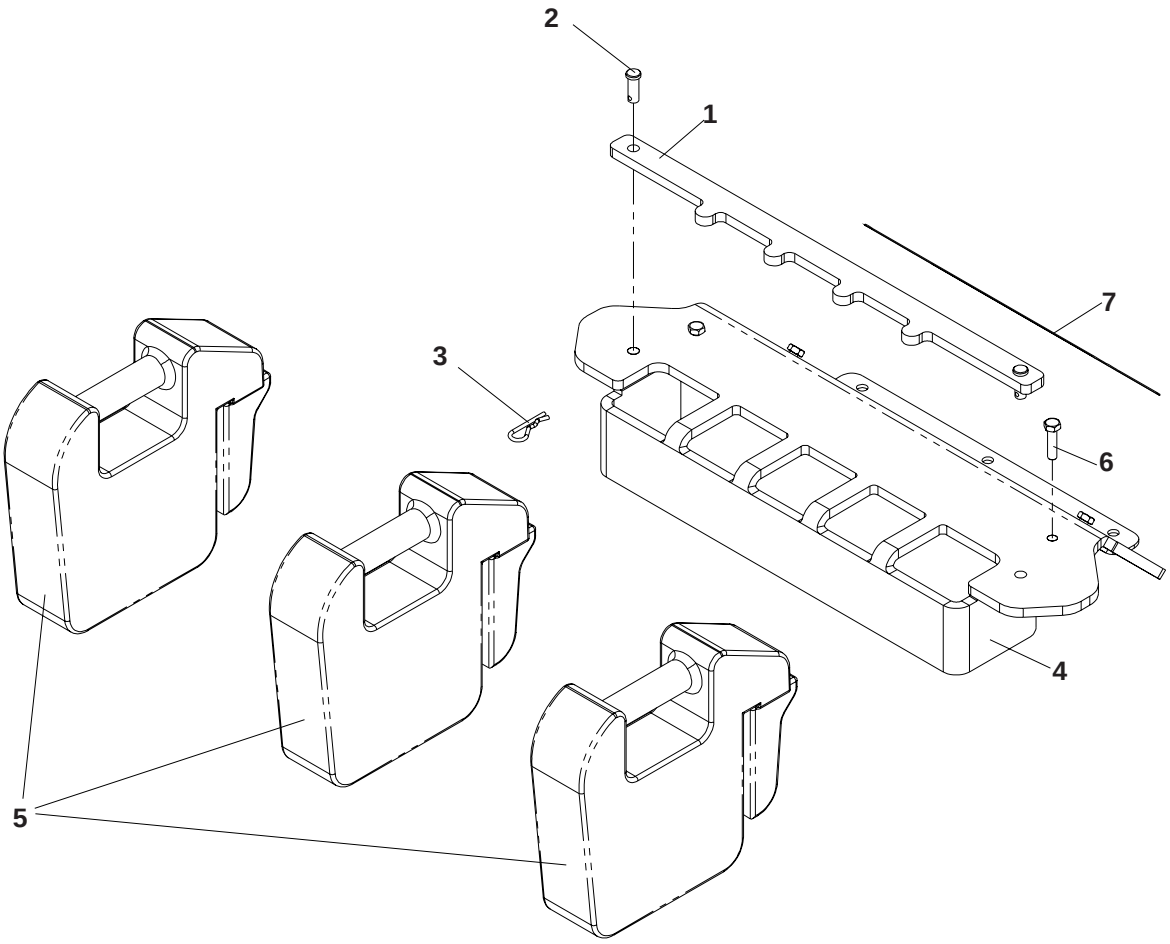

ITEM	PART NO.	QTY	DESCRIPTION
1	539111313	1	HOLD DOWN, WEIGHT BAR
2	539102049	2	CLEVIS PIN
3	539108096	2	SPRING RETAINER
4	539111337	1	WEIGHT BAR
5	ER92531	3	CAST COUNTERWEIGHT
6	539990627	4	HCS, 5/16-18 X 1 1/4, GR5
7	539977778	1	PAD, ABRASIVE

MOUNTING KIT

MODEL HCS13

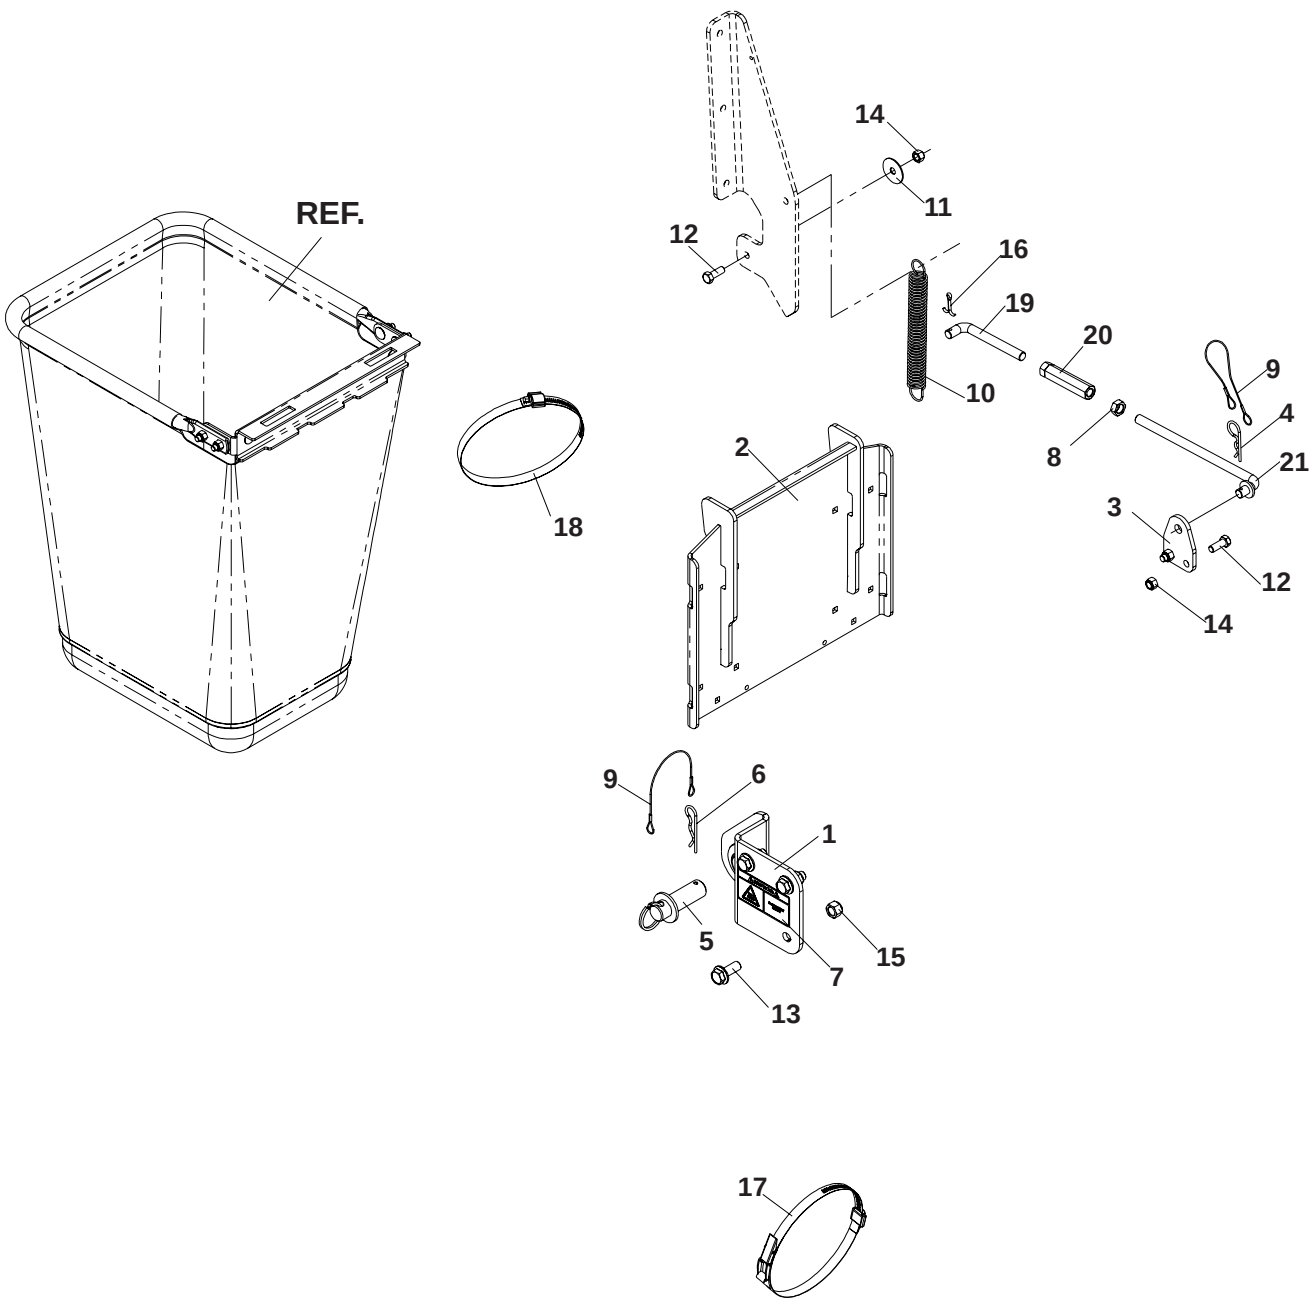

MOUNTING KIT

MODEL HCS13

ITEM	PART NO.	QTY	DESCRIPTION
1	539111322	1	HITCH BRACKET, RIGHT, W/DECAL
	539111199	1	HITCH BRACKET, LEFT (NOT SHOWN)
2	539111197	1	REAR GUARD
3	539111215	2	SUPPORT BRACKET
4	539976989	2	HAIRPIN #4
5	539111206	2	HITCH PIN
6	539111192	2	HAIRPIN
7	539111212	1	DECAL, HOT SURFACE
8	539108736	2	NUT, 1/2-20, HEX JAM
9	539102563	4	LANYARD
10	539111191	2	SPRING
11	539102998	2	FRICTION WASHER
12	539990563	6	HCS, 3/8-16 x 1, GR5
13	539990622	6	HFS, 1/2-13 X 1 1/2
14	539976979	6	NUT, 3/8C, NYLOC
15	539101331	6	NUT, 1/2C, NYLOC
16	539990654	2	COTTER PIN, 5/32 X 1 1/4
17	539109901	1	OVER CENTER BAND
18	539097076	1	HOSE CLAMP 6”-& 7”
19	539111208	2	SUPPORT LINKAGE, LH
20	539111207	2	TURNBUCKLE, 1/2”
21	539111210	2	SUPPORT LINKAGE

MOUNTING KIT

MODEL HCS9

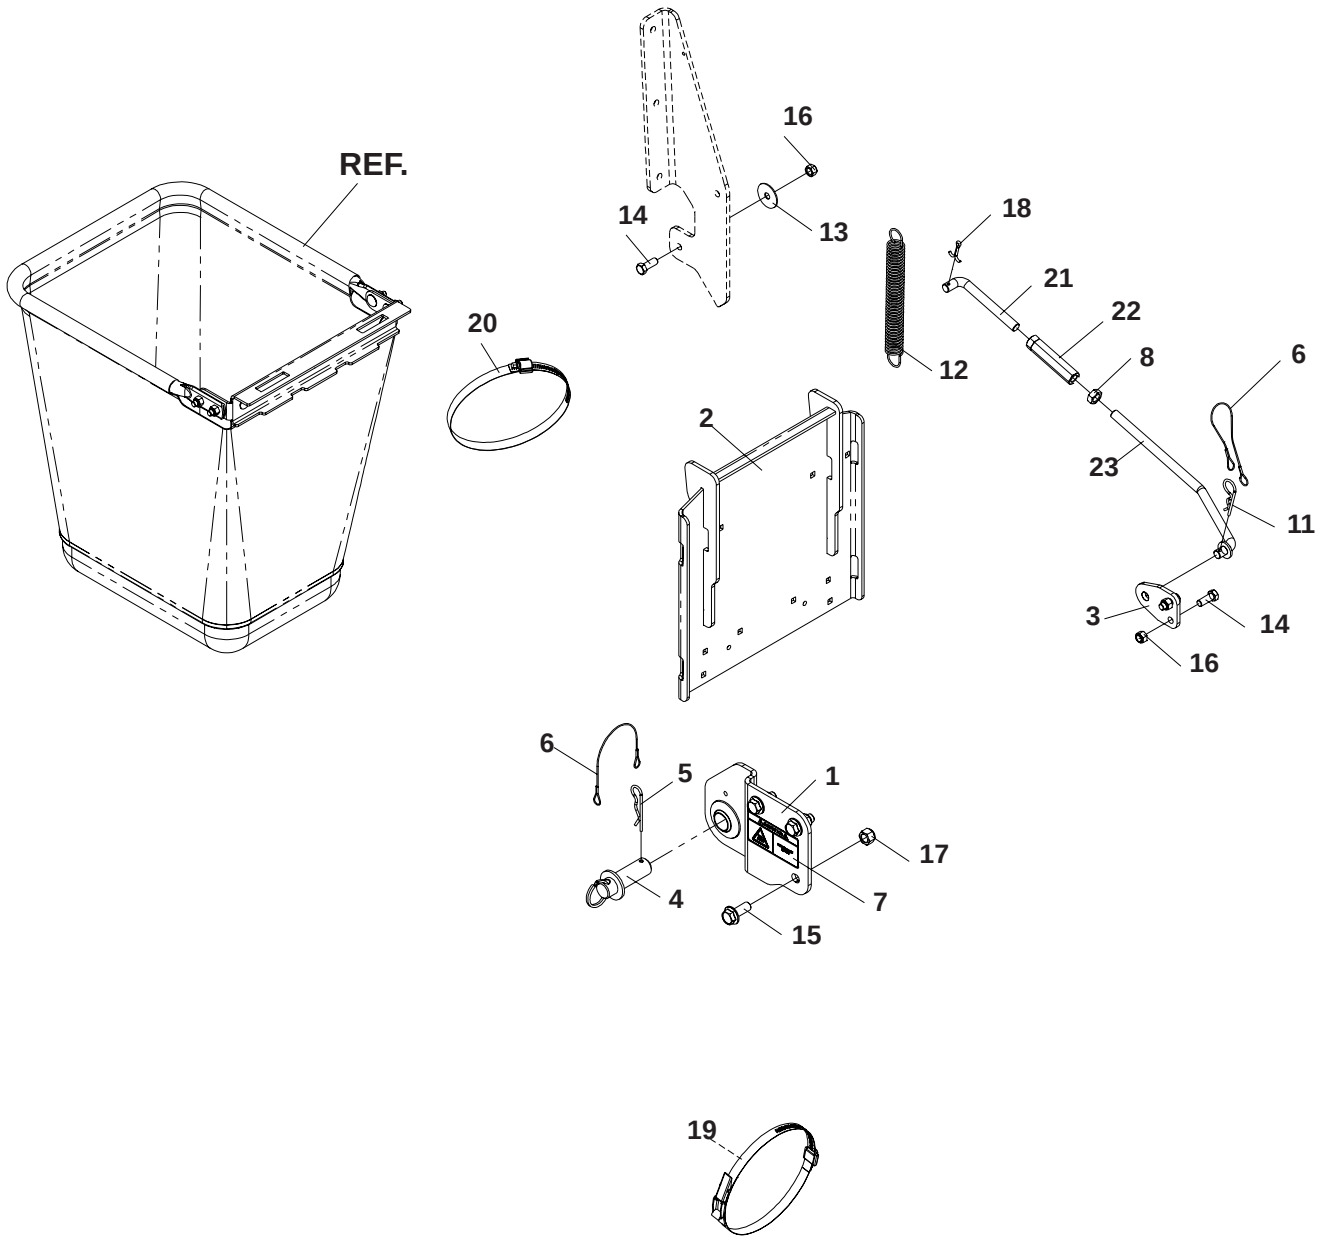

MOUNTING KIT

MODEL HCS9

ITEM	PART NO.	QTY	DESCRIPTION
1	539111294	1	HITCH BRACKET W/DECALS, RIGHT
	539111203	1	HITCH BRACKET, LEFT (NOT SHOWN)
2	539111195	1	REAR GUARD
3	539111215	2	SUPPORT BRACKET
4	539111206	2	HITCH PIN
5	539111192	2	HAIRPIN
6	539102563	4	LANYARD
7	539111212	1	DECAL, HOT SURFACE
8	539108736	2	NUT, 1/2-20, HEX JAM
11	539976989	2	HAIRPIN #4
12	539111191	2	SPRING
13	539102998	2	FRICTION WASHER
14	539990563	6	HCS, 3/8-16 x 1, GR5
15	539990622	6	HFS, 1/2-13 X 1 1/2
16	539976979	6	NUT, 3/8C, NYLOC
17	539101331	6	NUT, 1/2C, NYLOC
18	539990654	2	COTTER PIN, 5/32 X 1 1/4
19	539109901	1	OVER CENTER BAND
20	539097076	1	HOSE CLAMP 6”-& 7”
21	539111208	2	SUPPORT LINKAGE, LH
22	539111207	2	TURNBUCKLE, 1/2”
23	539111209	2	SUPPORT LINKAGE

BAG ASSEMBLY

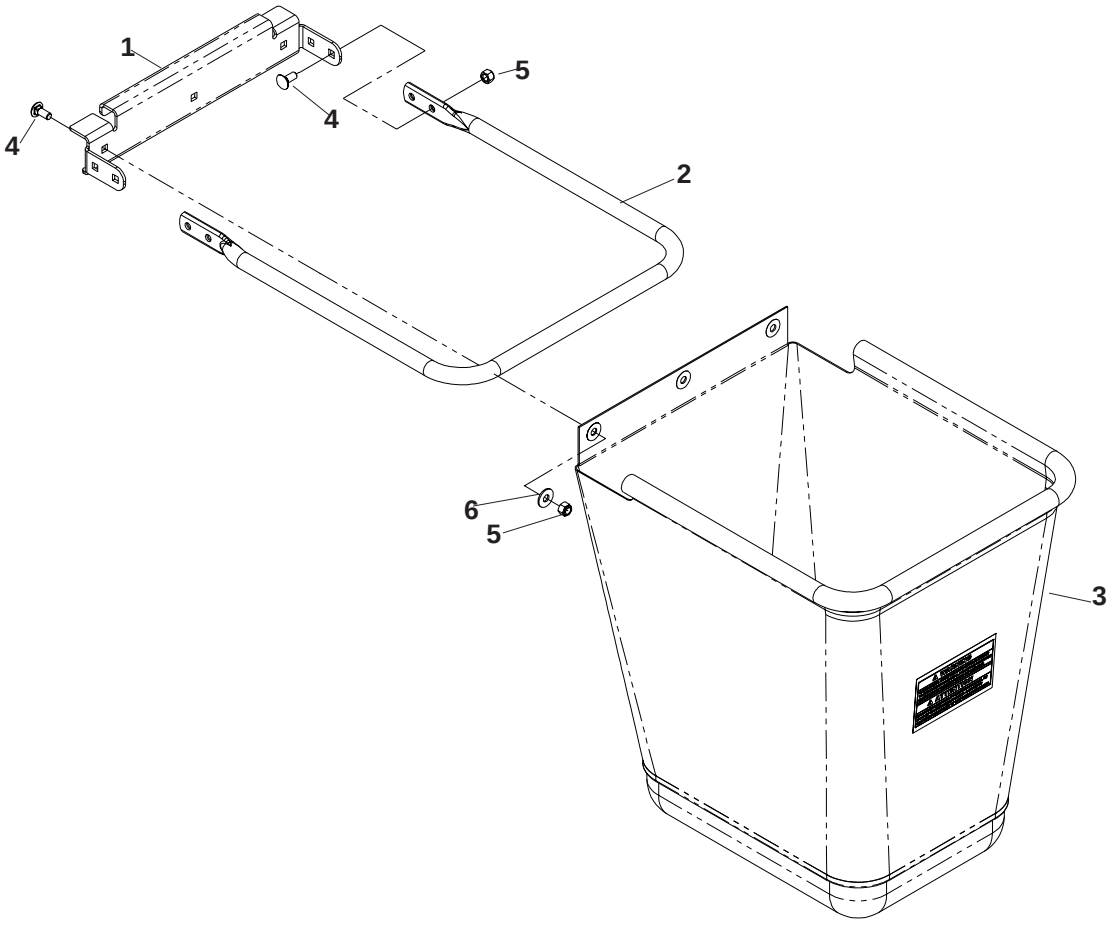

ITEM	PART NO.	QTY	DESCRIPTION
1	539110063	1	HANGER, BAG
2	539111166	1	TUBE, BAG FRAME
3	539111168	1	BAG, LARGE, MODEL HCS13
	539111300	1	BAG, SMALL, MODEL HCS9
4	539990316	7	RHSNB, 5/16-18 X 5/8, GR5
5	539990717	7	NUT, 5/16, NYLOC
6	539990692	3	WASHER, 5/16

DRIVE KIT ASSEMBLY

(539) 111275 - 42 INCH DECK

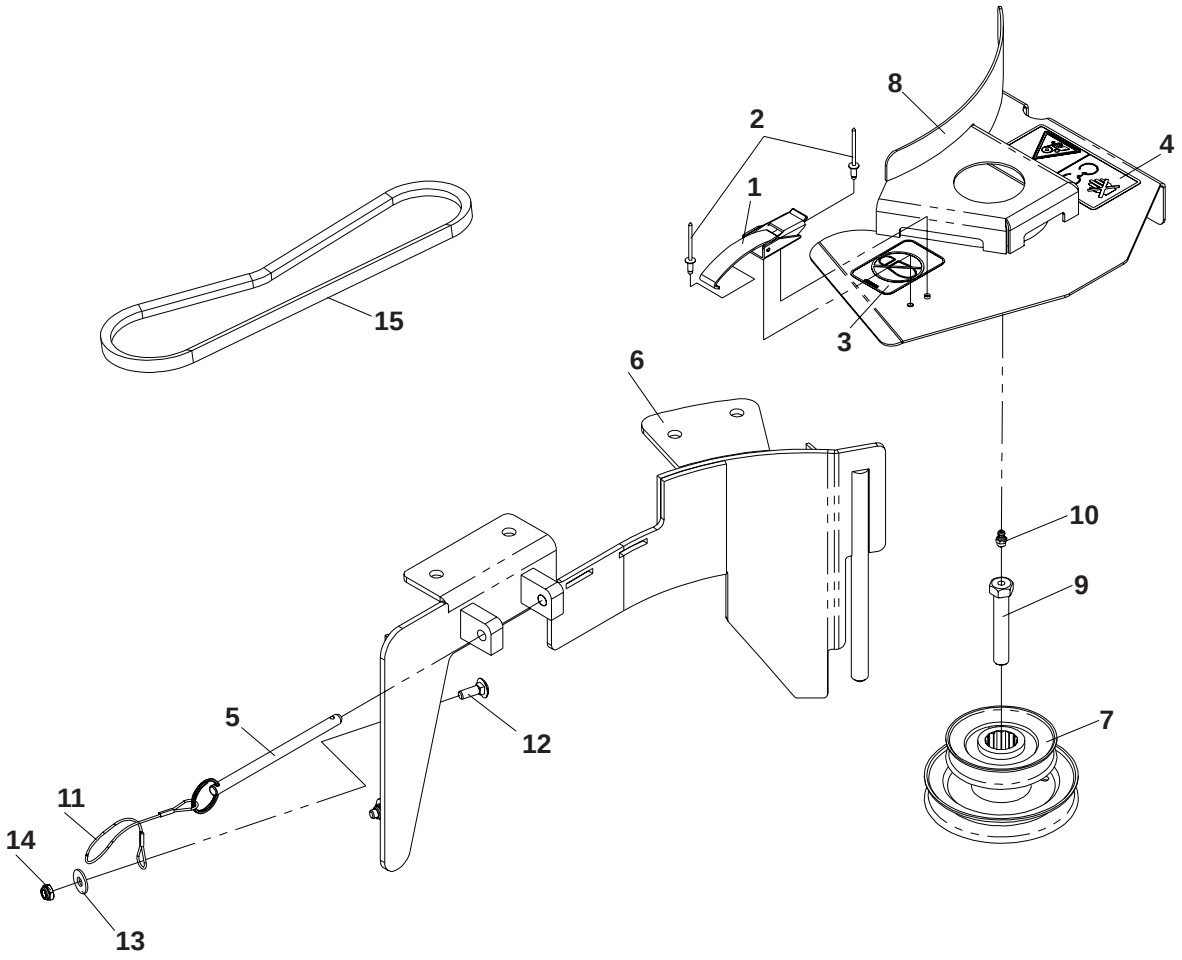

ITEM	PART NO.	QTY	DESCRIPTION
1	539109660	1	DRAW LATCH
2	539110740	2	RIVET, BLIND, DOME STYLE, 5/32 DIA.
3	539105743	1	DECAL, NO STEP
4	539105744	1	DECAL, DANGER BELT DRIVES
5	539111270	1	PIN
6	539111236	1	BLOWER DECK PLATE, 42/48
7	539111255	1	PULLEY, STACKED DOUBLE, 42/48
8	539111271	1	BELT SHIELD W/DECALS & LATCH, 42”
9	539108951	1	HCS, 7/16-20 X 2 1/2, GR5, SPEC.
10	539976998	1	ZERK
11	539102563	1	LANYARD
12	539990074	4	RHSNB, 1/4-20 X 3/4, GR2
13	539990598	4	WASHER, 1/4
14	539108120	4	NUT, 1/4C, THIN NYLOC
15	539111304	1	BELT

DRIVE KIT ASSEMBLY

(539) 111276 - 48 INCH DECK

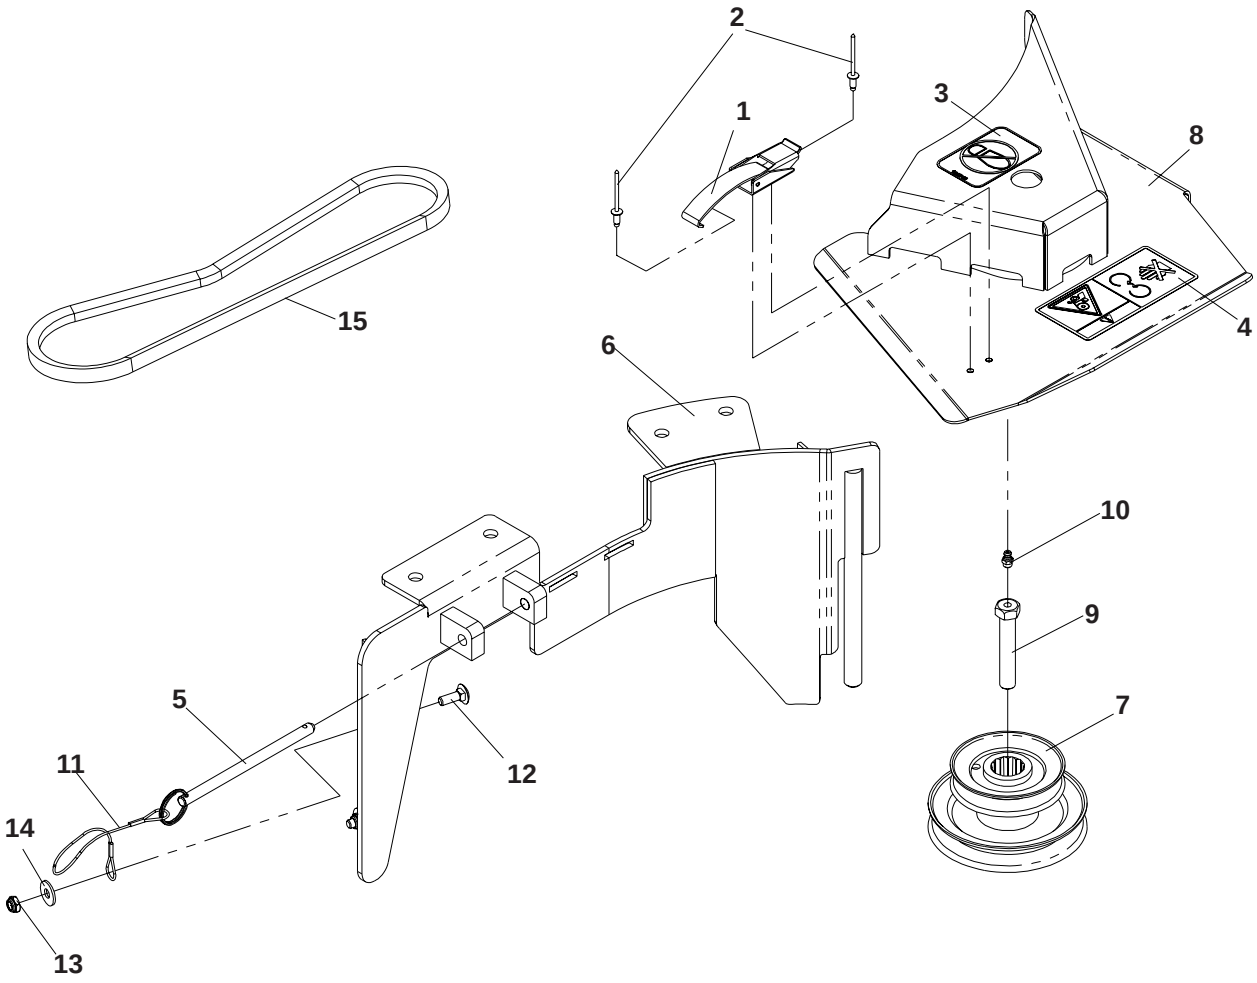

ITEM	PART NO.	QTY	DESCRIPTION
1	539109660	1	DRAW LATCH
2	539110740	2	RIVET, BLIND, DOME STYLE, 5/32 DIA.
3	539105743	1	DECAL, NO STEP
4	539105744	1	DECAL, DANGER BELT DRIVES
5	539111270	1	PIN
6	539111236	1	BLOWER DECK PLATE, 42/48
7	539111255	1	PULLEY, STACKED DOUBLE, 42/48
8	539111272	1	BELT SHIELD W/DECALS & LATCH, 48”
9	539108951	1	HCS, 7/16-20 X 2 1/2, GR5, SPEC.
10	539976998	1	ZERK
11	539102563	1	LANYARD
12	539990074	4	RHSNB, 1/4-20 X 3/4, GR2
13	539990598	4	WASHER, 1/4
14	539108120	4	NUT, 1/4C, THIN NYLOC
15	539111305	1	BELT

DRIVE KIT ASSEMBLY

(539) 111277 - 52 INCH DECK

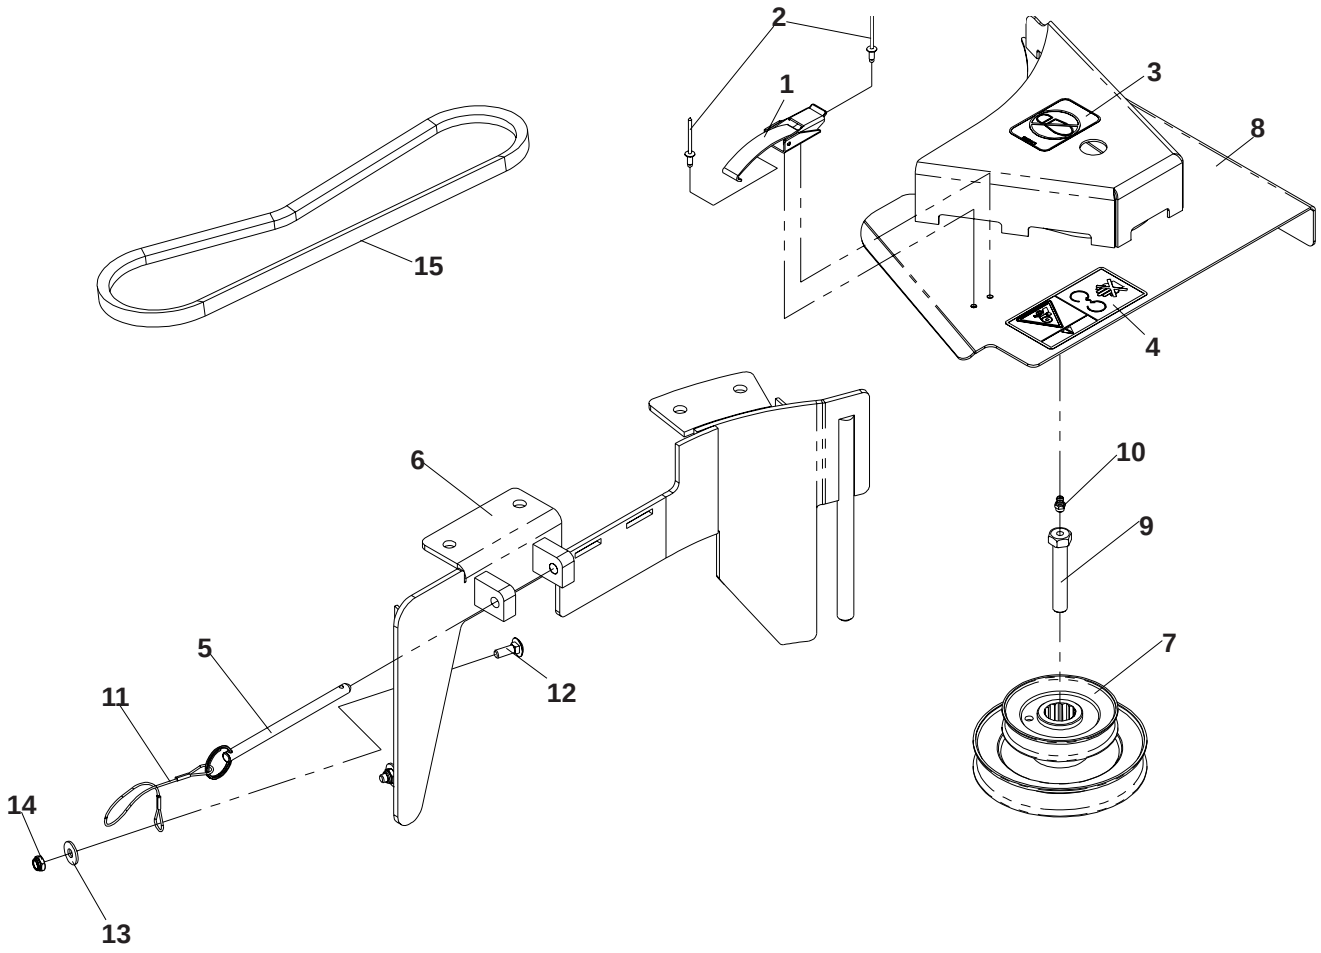

ITEM	PART NO.	QTY	DESCRIPTION
1	539109660	1	DRAW LATCH
2	539110740	2	RIVET, BLIND, DOME STYLE, 5/32 DIA.
3	539105743	1	DECAL, NO STEP
4	539105744	1	DECAL, DANGER BELT DRIVES
5	539111270	1	PIN
6	539111264	1	BLOWER DECK PLATE, 52
7	539111256	1	PULLEY, STACKED DOUBLE, 52
8	539111273	1	BELT SHIELD W/DECALS & LATCH, 52
9	539108951	1	HCS, 7/16-20 X 2 1/2, GR5, SPEC.
10	539976998	1	ZERK
11	539102563	1	LANYARD
12	539990074	4	RHSNB, 1/4-20 X 3/4, GR2
13	539990598	4	WASHER, 1/4
14	539108120	4	NUT, 1/4C, THIN NYLOC
15	539111306	1	BELT

DRIVE KIT ASSEMBLY

(539) 111278 - 61 INCH DECK

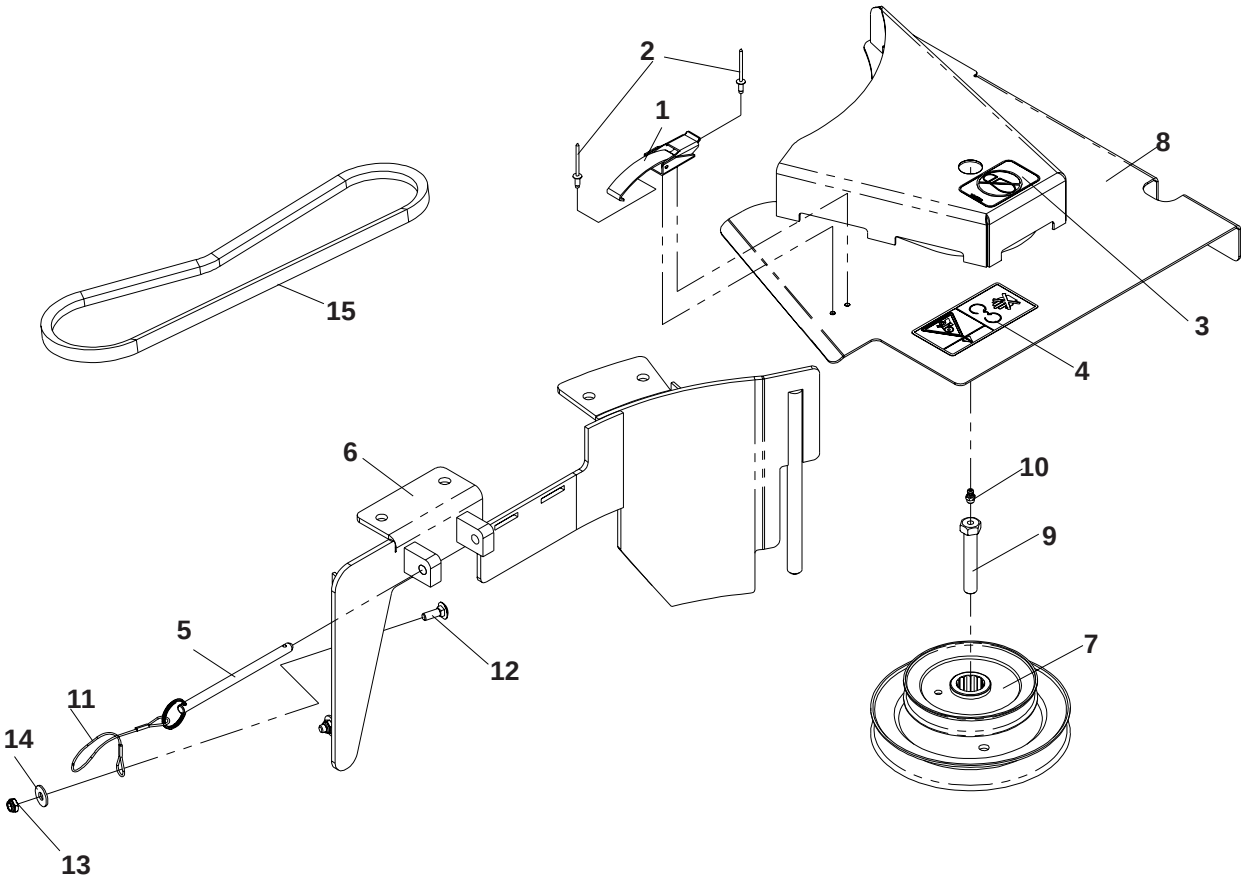

ITEM	PART NO.	QTY	DESCRIPTION
1	539109660	1	DRAW LATCH
2	539110740	2	RIVET, BLIND, DOME STYLE, 5/32 DIA.
3	539105743	1	DECAL, NO STEP
4	539105744	1	DECAL, DANGER BELT DRIVES
5	539111270	1	PIN
6	539111240	1	BLOWER DECK PLATE, 61
7	539111257	1	PULLEY, STACKED DOUBLE, 61
8	539111274	1	BELT SHIELD W/DECALS & LATCH, 61
9	539108951	1	HCS, 7/16-20 X 2 1/2, GR5, SPEC.
10	539976998	1	ZERK
11	539102563	1	LANYARD
12	539990074	4	RHSNB, 1/4-20 X 3/4, GR2
13	539990598	4	WASHER, 1/4
14	539108120	4	NUT, 1/4C, THIN NYLOC
15	539111307	1	BELT

Husqvarna